

# KitchenAid®



## IMMERSION BLENDER

### INSTRUCTIONS

KHB100

KHB200

KHB300



1-800-541-6390  
Details Inside



FOR THE WAY IT'S MADE.™

# Hassle-Free Replacement Warranty

---



We're so confident the quality of our products meets the exacting standards of KitchenAid that, if your Immersion Blender

should fail within the first year of ownership, KitchenAid will arrange to deliver an identical or comparable replacement to your door free of charge and arrange to have your "failed" Immersion Blender returned to us. Your replacement unit will also be covered by our one year full warranty. Please follow these instructions to receive this quality service.

## If you reside in the 50 United States and your KitchenAid®

Immersion Blender should fail within the first year of ownership, simply call our toll-free Customer Satisfaction Center at **1-800-541-6390**, 8 a.m. to 8 p.m., Monday through Friday, 10 a.m. to 5 p.m., Saturday, Eastern Time. Give the consultant your complete shipping address. (No P.O. Box Numbers, please.)

When you receive your replacement Immersion Blender, use the carton and packing materials to pack-up your "failed" Immersion Blender. In the carton, include your name and address on a sheet of paper along with a copy of the proof of purchase (register receipt, credit card charge slip, etc.).

For a detailed explanation of warranty terms and conditions, including how to arrange for service outside the United States, see pages 3 and 4.

## Proof of Purchase & Product Registration

---

Always keep a copy of the sales receipt showing the date of purchase of your Immersion Blender. Proof of purchase will assure you of in-warranty service.

Before you use your Immersion Blender, please fill out and mail your product registration card packed with the unit. This card will enable us to contact you in the unlikely event of a

product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. This card does not verify your warranty.

Please complete the following for your personal records:

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_

Store Name \_\_\_\_\_

# Table of Contents

Hassle-Free Replacement Warranty .....	Inside Front Cover
Product Registration Card .....	Inside Front Cover
Important Safeguards .....	2
Warranty .....	3
For the 50 United States and District of Columbia .....	3
For Puerto Rico .....	4
Arranging for Service after the Warranty Expires .....	4
Arranging for Service Outside the 50 United States and Puerto Rico .....	4
Ordering Accessories and Replacement Parts .....	4
Electrical Requirements .....	5
Troubleshooting Problems .....	5
Immersion Blender Features .....	6
Assembling Your Immersion Blender .....	8
Operating Your Immersion Blender .....	9
Operating Tips .....	13
Care and Cleaning .....	13
Storage .....	13

## **Your safety and the safety of others are very important.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:



**You can be killed or seriously injured if you don't immediately follow instructions.**



**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

# IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put motor body, cord or electrical plug of this Immersion Blender in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Be certain chopper cover is securely locked in place before operating appliance.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surface, including the stove.
12. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
13. Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used, but must be used only when the unit is not running.
14. Blades are sharp. Handle carefully.
15. This product is designed for household use only.

## SAVE THESE INSTRUCTIONS

# KitchenAid® Immersion Blender Warranty for the 50 United States and District of Columbia

This warranty extends to the purchaser and any succeeding owner for Immersion Blenders operated in the 50 United States and District of Columbia.

Length of Warranty:	KitchenAid Will Pay For Your Choice of:	KitchenAid Will Not Pay For:
<p>One Year Full Warranty from date of purchase.</p>	 <p>Hassle-Free Replacement of your Immersion Blender. See inside front cover for details on how to arrange for service, or call the Customer Satisfaction Center toll-free at <b>1-800-541-6390</b>.</p> <p>OR</p> <p>The replacement parts and repair labor costs to correct defects in materials and workmanship. Service must be provided by an Authorized KitchenAid Service Center. See the KitchenAid® Immersion Blender Warranty for Puerto Rico on page 4 for details on how to arrange for service.</p>	<p>A. Repairs when Immersion Blender is used in other than normal single family home use.</p> <p>B. Damage resulting from accident, alteration, misuse or abuse.</p> <p>C. Any shipping or handling costs to deliver your Immersion Blender to an Authorized Service Center.</p> <p>D. Replacement parts or repair labor costs for Immersion Blender operated outside the 50 United States and District of Columbia.</p>

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

# KitchenAid® Immersion Blender Warranty for Puerto Rico

---

A limited one year warranty extends to the purchaser and any succeeding owner for Immersion Blenders operated in Puerto Rico. During the warranty period, all service **must** be handled by an Authorized KitchenAid Service Center. Please bring the Immersion Blender, or ship it prepaid and insured, to the nearest

Authorized Service Center. Call toll-free **1-800-541-6390**, 8 a.m. to 8 p.m., Monday through Friday, 10 a.m. to 5 p.m., Saturday, Eastern Time to learn the location of a Service Center near you. Your repaired Immersion Blender will be returned to you prepaid and insured.

## Arranging for Service After the Warranty Expires

---

For service information, call toll-free **1-800-541-6390**, 8 a.m. to 8 p.m., Monday through Friday, 10 a.m. to 5 p.m., Saturday, (Eastern Time) or

write to:  
Customer Satisfaction Center,  
KitchenAid Portable Appliances, P.O.  
Box 218, St. Joseph, MI 49085-0218.

## Arranging for Service Outside the 50 United States and Puerto Rico

---

Consult your local KitchenAid dealer or the store where you purchased the

Immersion Blender for information on how to obtain service.

## Ordering Accessories and Replacement Parts

---

To order accessories or replacement parts for your Immersion Blender, call toll-free **1-800-541-6390**, 8 a.m. to 8 p.m., Monday through Friday, 10 a.m. to 5 p.m., Saturday, Eastern

Time or write to:  
Customer Satisfaction Center,  
KitchenAid Portable Appliances, P.O.  
Box 218, St. Joseph, MI 49085-0218.

# Electrical Requirements

---

Volts: 120 A.C. only. Hertz: 60

The amperage rating for your blender is located on the serial plate. The maximum rating is based on the attachment that draws the greatest load. Other recommended attachments may draw significantly less current.

**NOTE:** This Immersion Blender has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Extension cords are available and may be used if special care is exercised in their use.



If a long extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- The cord should be arranged so it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

## Troubleshooting Problems

---


**If your Immersion Blender should malfunction or fail to operate, please check the following:**

1. Is the Immersion Blender plugged in?
2. Is the fuse in the circuit to the Immersion Blender in working order? If you have a circuit breaker box, be sure the circuit is closed.
3. Turn Immersion Blender off for 10-15 seconds, then turn Immersion Blender back on.

If the problem cannot be corrected with the above steps, see the KitchenAid Warranty on page 3. Do not return the Immersion Blender to the retailer; retailers do not provide service.

# Immersion Blender Features

---

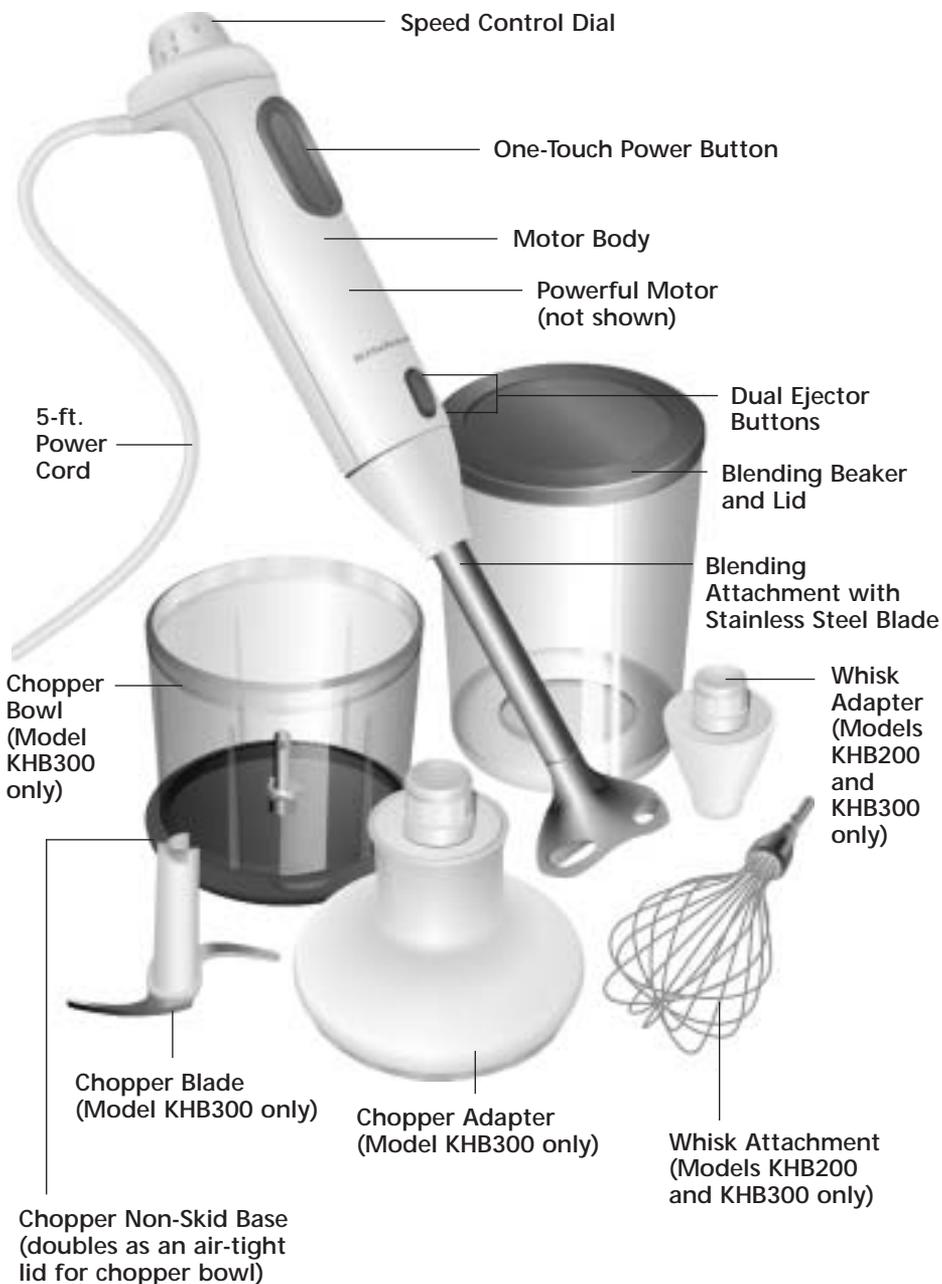

# Immersion Blender Features

---

**Speed Control Dial** offers speeds ranging from 9 (high) to 1 (low).

**One-Touch Power Button** is located on the front of the motor body and is activated by pressing and holding during blending. To stop blending, simply release the power button.

**Motor Body** is designed for a comfortable, non-slip grip.

**Powerful Motor (not shown)** provides powerful blending action and is designed for quiet, long-life operation.

**Blending Attachment with Stainless Steel Blade** simply snaps onto the motor body. The sharp stainless steel blade is covered to help prevent splashing while blending.

**Dual Ejector Buttons** located on opposite sides of the motor body, release an attachment (and adapter) from the motor body when pressed.

**5-ft. Power Cord** is long enough to take the Immersion Blender to the cooktop or work area and is rounded with no grooves for easy clean up.

**Blending Beaker and Lid** are handy for individual blending jobs. Lid seals the top of the beaker to store blended ingredients.

**Whisk Attachment and Adapter** (Models KHB200 and KHB300 only) whips egg whites and whipping cream to great heights. Whisk fits into the adapter, and the adapter snaps into the motor body. Adapter automatically adjusts the whisk to the proper range of speeds appropriate for whipping.

**Chopper Attachment and Adapter** (Model KHB300 only) is perfect for small chopping jobs like herbs, nuts and vegetables. Chopper includes a bowl, blade, and chopper adapter. The chopper adapter snaps into the motor body, then locks over the top of the chopper bowl and blade. The chopper bowl base fits snugly on the bottom of the bowl during chopping process to prevent movement of the entire attachment, then seals on top of the chopper bowl for storage of ingredients.

**Storage Bag** (Model KHB300 only) Cotton Twill drawstring bag is designed with three distinctive pockets to store the Immersion Blender motor body, the stainless steel blending attachment, and the whisk attachment. Storage bag is machine washable.



Storage Bag  
(Model KHB300 only)

# Assembling Your Immersion Blender

1. Before using the KitchenAid® Immersion Blender for the first time, wipe the motor body and attachment adapters with a clean, damp cloth to remove any dirt or dust. Mild dish soap may be used, but do not use abrasive cleansers.


**NOTE:** Do not immerse the motor body or the adapters in water.

Dry with a soft cloth. Wash all the attachments and accessories by hand or in the dishwasher. Dry thoroughly.

**NOTE:** Always be sure to unplug the power cord from the wall socket before attaching or removing attachments.

2. Install attachments by aligning the motor body with either the blending attachment or an attachment adapter (Models KHB200 and KHB300 only). Insert the blending attachment or attachment adapter into the motor body until it locks with a click.

3. Remove the attachments by pressing both ejector buttons on either side of the body.

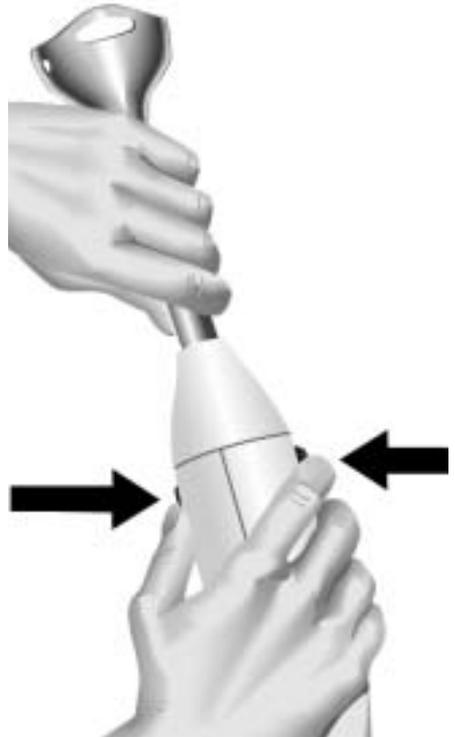

4. Read Operating Tips (page 13).



# Operating Your Immersion Blender

---

## Using the Blending Attachment

1. Insert the blending attachment into the motor body.



2. Plug the electrical cord into an electrical wall socket.
3. Adjust the speed by turning the speed control dial on top of the Immersion Blender.
4. Insert the Immersion Blender into the mixture.

**NOTE:** Immersion Blender should only be immersed in liquids the length of the attachment. Do not submerge beyond the seam of the blending attachment. Do not immerse the motor body into liquids or other mixtures.

5. Press the power button to activate the Immersion Blender.
6. When blending is complete, release the power button before removing Immersion Blender from the mixture.
7. Unplug immediately after use, before removing or changing attachments.

# Operating Your Immersion Blender

---

## Using the Whisk Attachment

(Models KHB200 and KHB300 only)

Use the whisk to whip cream, beat egg whites and mix instant puddings.

1. Insert the whisk into the whisk adapter.



2. Insert the whisk adapter into the motor body. Adapter automatically adjusts the whisk to the proper range of speeds appropriate for whipping.
3. Plug the electrical cord into an electrical wall socket.
4. Adjust the speed by rotating the speed control dial on top of the Immersion Blender.
5. Insert the Immersion Blender into the mixture.

**NOTE:** Immersion Blender should only be immersed in liquids the length of the attachment. Do not submerge beyond the seam of the whisk adapter. Do not immerse the motor body into liquids or other mixtures.

6. Press the power button to activate the Immersion Blender.
7. When whisking process is complete, release the power button before removing Immersion Blender from the mixture.
8. Unplug immediately after use, before removing or changing attachments.

# Operating Your Immersion Blender

## Using the Chopper Attachment (Model KHB300 only)

### **WARNING**

#### **Cut Hazard**

**Handle blades carefully.**

**Failure to do so can result in cuts.**

Use the chopper to chop small amounts of foods such as meat, cheese, onions, herbs, garlic, carrots, and nuts.

1. To help prevent the chopper from slipping during processing, place the chopper base on the bottom of the chopper bowl.



2. Insert the chopper blade into the chopper bowl.
3. Add small pieces of foods to the bowl.
4. Insert the chopper adapter into the motor body.
5. Align the chopper adapter with the chopper bowl and turn to lock in place.
6. Hold the motor body with one hand and the chopper bowl with the other while processing.



7. Press the power button to activate Immersion Blender. For best results, "pulse" the power by pressing and releasing the power button until ingredients reach the desired consistency.

# Operating Your Immersion Blender

- When chopping is complete, release the power button. Remove the chopper attachment by pressing both ejector buttons on each side of the motor body.
- Unplug immediately after use, before removing or changing attachments.

### Chopper Processing Guide

Food	Quantity	Preparation	Speed*	Time*
Meats	200 g / 7 oz	Cut into 2 cm / $\frac{3}{4}$ " Cubes	7-9	15 Seconds
Almonds/Nuts	200 g / 7 oz	Place in Whole Nuts	5-7	25 Seconds
Garlic	10-12 Cloves	Place in Whole Cloves	2-4	15 Seconds
Onions	100 g / 3.5 oz	Cut into Quarters	2-4	15 Seconds
Cheese	100 g / 3.5 oz	Cut into 1 cm / $\frac{3}{8}$ " Cubes	7-9	30 Seconds
Hard Boiled Eggs	2	Place in Whole Eggs	7-9	3 Pulses
Carrots	200 g / 7 oz	Cut Average Carrot into Quarters	5-7	15 Seconds
Herbs	50 g / 2 oz	Remove Stalks	7-9	15 Seconds

\* Processing times and speeds are approximate. Actual usage may vary depending on quality of food and desired chop size.

## Operating Tips

---

- Cut solid foods into small pieces for easier blending or chopping.
- To avoid splashing, insert the Immersion Blender into the mixture before pressing the power button, and release the power button before pulling the Immersion Blender out of the mixture.
- When blending in a saucepan on a cooktop, remove the pan from the heating element to protect the Immersion Blender from overheating.
- For best blending, hold the Immersion Blender at an angle and gently move up and down within the container. Do not pound down on the mixture with the Immersion Blender.
- Be sure the extra long cord of the Immersion Blender is not extending over a hot heating element.
- Do not let the Immersion Blender sit in a hot pan on the cooktop while not in use.
- Remove hard items, such as fruit pits or bones, from the mixture before blending or chopping to help prevent damage to the blades.
- Do not use your Immersion Blender to process coffee beans or hard spices such as nutmegs. Processing these foods could damage the blades of the Immersion Blender.
- To prevent overflow, allow room in the container for the mixture to rise when using the Immersion Blender.
- Do not use the beaker or the chopper bowl in the microwave oven.

## Care and Cleaning

---

1. Unplug Immersion Blender before cleaning.
2. Remove the adapters and attachments by pressing both ejector buttons on either side of the motor body.
3. Wipe the motor body and adapters with a damp cloth. Mild dish soap may be used, but do not use abrasive cleansers.
4. Wipe power cord with warm, sudsy cloth; then wipe clean with damp cloth. Dry with soft cloth.

### IMMERSION BLENDER ACCESSORIES AND ATTACHMENTS

Wash blending attachment, beaker and lid, whisk (Models KHB200 and KHB300 only), chopper bowl, blade, and non-skid base (Model KHB300 only) in hot, soapy water, or in the top rack of the dishwasher. Dry thoroughly.

**NOTE:** Do not immerse the motor body or the adapters in water.

## Storage

---

The included drawstring storage bag (Model KHB300 only) is designed with three distinct compartments to conveniently store the Immersion Blender motor body and cord, the blending attachment, and the whisk attachment. The durable, cotton twill bag is machine washable.



FOR THE WAY IT'S MADE.™

® Registered Trademark/™ Trademark of KitchenAid, U.S.A.