



5KHM9212



KitchenAid





TABLE OF CONTENTS

 
 
 
 
 
 
PARTS AND FEATURES	3
Parts and accessories	3
Accessory guide	4
HAND MIXER SAFETY	5
Important Safeguards.....	5
Electrical requirements.....	7
USING YOUR HAND MIXER.....	8
Speed control guide.....	8
Operating the speed control.....	9
SETTING UP YOUR HAND MIXER.....	10
Attaching the accessories	10
Removing the accessories	11
CARE AND CLEANING	11
TROUBLESHOOTING	12





PARTS AND FEATURES



PARTS AND ACCESSORIES

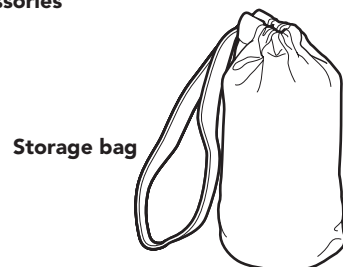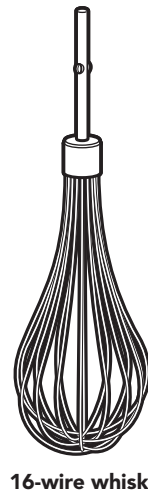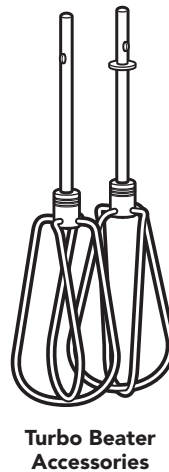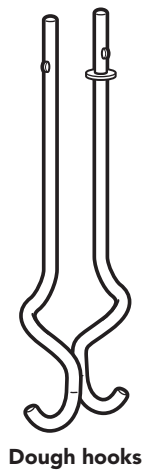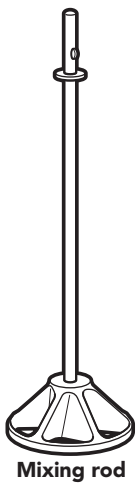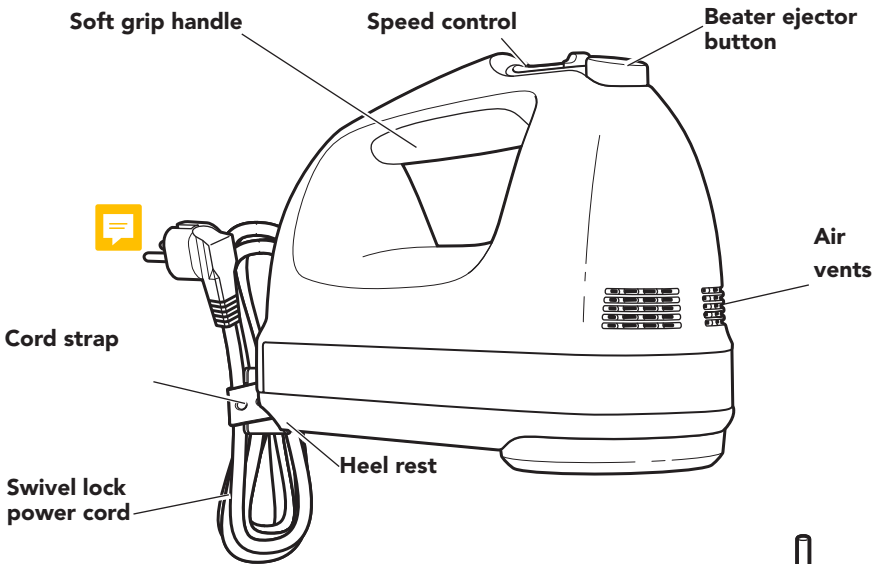



PARTS AND FEATURES

  ACCESSORY GUIDE

ACCESSORY	USES
Turbo Beater Accessories 	cookie dough cake batter
Mixing rod 	smoothies milkshakes sauces salad dressing
Dough hooks 	yeast bread doughs
16-wire whisk 	whipped cream whipped egg whites sauces puddings
Storage bag 	to store accessories





HAND MIXER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Hand Mixer in water or other liquid.
3. This appliance is not intended for use by persons, (including children), with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



HAND MIXER SAFETY

7. Never leave the appliance unattended while it is in operation.
8. Unplug Hand Mixer from the outlet when not in use, before putting on or taking off parts, and before cleaning.
9. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from all accessories during operation to reduce the risk of injury to persons and/or damage to the Hand Mixer.
10. Do not operate the Hand Mixer with a damaged cord or plug, or after the Hand Mixer malfunctions, or is dropped or damaged in any manner. Return the Hand Mixer to the nearest Authorised Service Centre for examination, repair, or adjustment.
11. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
12. Do not use the Hand Mixer outdoors.
13. Do not let the cord hang over the edge of table or counter, or touch hot surfaces.
14. Do not let the cord contact hot surface, including the stove.
15. Remove any accessories from Hand Mixer before washing.
16. Do not use appliance for other than intended use.





HAND MIXER SAFETY

17. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
18. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

ELECTRICAL REQUIREMENTS



WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 Volts

Frequency: 50-60 Hertz

Wattage: 85 Watts

 
NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.











USING YOUR HAND MIXER



SPEED CONTROL GUIDE



The 9-Speed Hand Mixer always starts on the lowest speed (Speed 1). Move to higher speeds as needed; the speed setting indicator control will light up with the corresponding number for each speed.

        SPEED	ATTACHMENT	DESCRIPTION
1		For slow stirring, combining, and starting all mixing procedures. Use this speed to stir in nuts, chocolate chips, shredded cheese, onions, olives, and other chunky ingredients.
2	 	Mix flour and other dry ingredients with liquids or other moist mixtures. Knead yeast dough (bread, pizza dough) with the dough hooks.
3		Mix runny batters, such as pancake or waffle batter.
4		Combine heavy mixtures, such as cookie or biscuit dough.
5		Mix thick dough, such as muffin or cake batter. Mash potatoes or squash.
6		Blend butter and sugar. Mix frostings.
7		Finish mixing cake and other batters.
8	 	Whip cream and mousse mixtures. Mix liquid preparations (milkshakes, sauces) and emulsify salad dressings.
9	 	Beat egg white and meringue mixtures. Mix liquid preparations (milkshakes, sauces) and emulsify salad dressings.

NOTE: To mix and knead bread dough, use the dough hooks. The Turbo Beater Accessories are not designed for that purpose.





USING YOUR HAND MIXER



OPERATING THE SPEED CONTROL

This KitchenAid Hand Mixer will beat faster and more thoroughly than most other electric hand mixers. Therefore, the beating time in most recipes must be adjusted to avoid overbeating. Beating time is faster due to larger beater sizes.

 
To help determine the ideal beating time, observe the batter or dough and beat only until it has the desired appearance described in your recipe, such as “smooth and creamy”. To select the best beating speeds, use the “Speed control guide” section.

! WARNING


Injury Hazard

Unplug mixer before touching beaters.


Failure to do so can result in broken bones, cuts, or bruises.

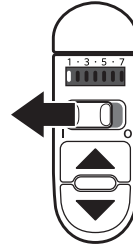**1**

 Plug the Hand Mixer into an electrical outlet. Slide the Power switch to the “I” (ON) position. The motor will automatically start at Speed 1, and the “1” on the speed indicator control will light up.

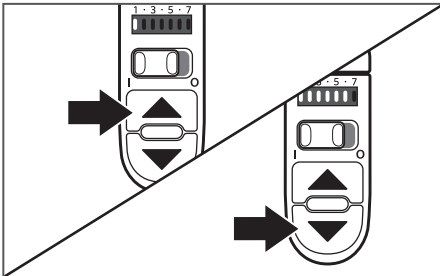**2**

 Touch the “UP (arrow)” button to increase the mixing speed to the desired setting. If necessary, touch the “DOWN (arrow)” button to decrease the mixing speed. See the “Speed control guide” for more information.

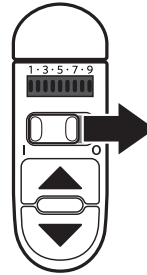**3**

When mixing job is finished, slide the Power switch to the “O” (Off) position. Unplug the Hand Mixer before removing accessories.

NOTE: The Hand Mixer automatically starts at Speed 1 every time it is turned on, regardless of the speed setting at the time the mixer is shut off.



SETTING UP YOUR HAND MIXER

ATTACHING THE ACCESSORIES

⚠ WARNING

 
Injury Hazard

Unplug mixer before touching beaters.


Failure to do so can result in broken bones, cuts, or bruises.

IMPORTANT: Be sure to read and follow the specific instructions in this manual for proper use of the Hand Mixer.

Unplug the Hand Mixer from the electrical outlet.

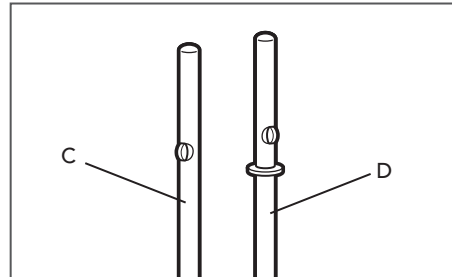


 Paired accessories (Turbo Beater Accessories, dough hooks) include one accessory with a collar (D), and one without (C). Single accessories come with a collar (D) (mixing rod) or without (C) (whisk).

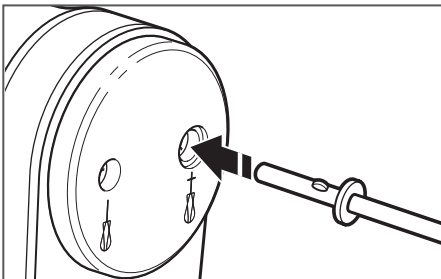

1

 Insert the accessory shaft with the collar (D) into the larger opening (B) of the Hand Mixer. Align the flanges on the shaft with the slots in the opening. Push to lock into place.

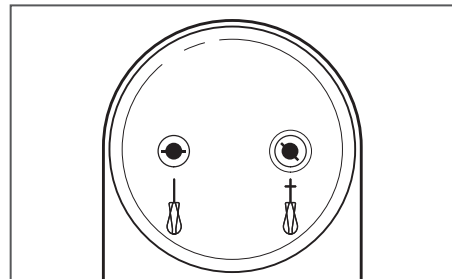

2

Insert the accessory without a collar (C) into the smaller opening (A). Align and push to lock into place.

 
NOTE: An accessory shaft without a collar may be used in either opening (A or B). Those with a collar may only be used in the larger opening (B).






SETTING UP YOUR HAND MIXER

REMOVING THE ACCESSORIES

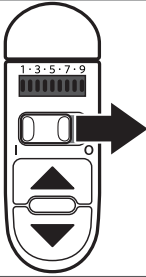

1

 If the Hand Mixer is running, stop the Hand Mixer by sliding the Power switch to the "O" (Off) position. Unplug the Hand Mixer from the electrical outlet.

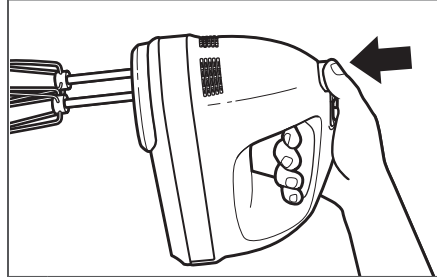

2

Press the ejector button to release the accessories from the Hand Mixer, then remove them.

CARE AND CLEANING

CLEANING THE HAND MIXER BODY

⚠ WARNING



Electrical Shock Hazard

Do not put in water.

Doing so can result in death or electrical shock.

 
⚠ WARNING

Injury Hazard

Unplug mixer before touching beaters.


Failure to do so can result in broken bones, cuts, or bruises.

NOTE: Do not immerse Hand Mixer in water.

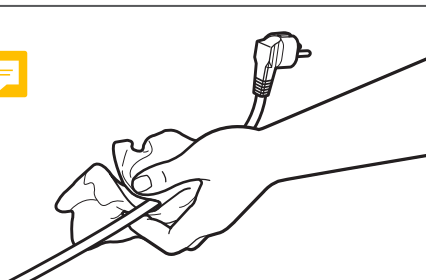

1

 Always unplug Hand Mixer before cleaning. Wipe power cord and cord strap with damp cloth. Dry with a soft cloth.

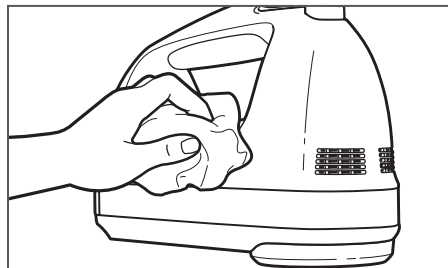


2

Wipe Hand Mixer with a damp cloth. Dry with a soft cloth.



CARE AND CLEANING

 CLEANING THE ACCESSORIES

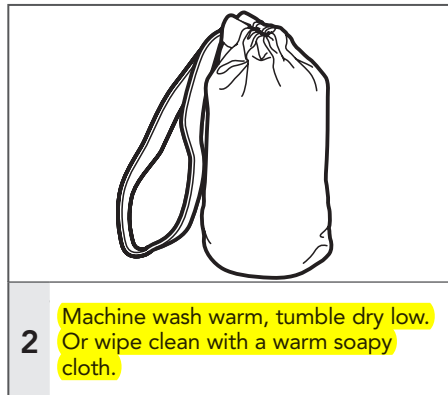

TROUBLESHOOTING

IF HAND MIXER MALFUNCTIONS OR FAILS TO OPERATE

First try the solutions suggested here and possibly avoid the cost of service.

1. Is the Hand Mixer plugged in?
2. Is the fuse in the circuit to the Hand Mixer in working order? If you have a circuit breaker box, make sure the circuit is closed.
3. Try unplugging the Hand Mixer, then plug it back in.

If the problem cannot be fixed with the steps provided in this section, then contact KitchenAid or an Authorised Service Centre. Do not return the Hand Mixer to the retailer – they do not provide service.





目录

零部件和功能	14
零部件和配件	14
配件指导	15
手持式搅拌机安全措施	16
重要保护措施	16
电气要求	17
使用您的手持式搅拌机	18
速度控制器指导	18
操作速度控制器	19
设置您的手持式搅拌机	20
连接配件	20
拆卸配件	20
保养和清洁	21
故障排除	22




零部件和功能

  
零部件和配件

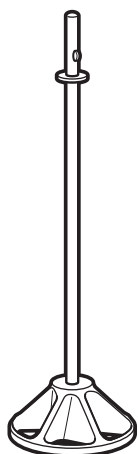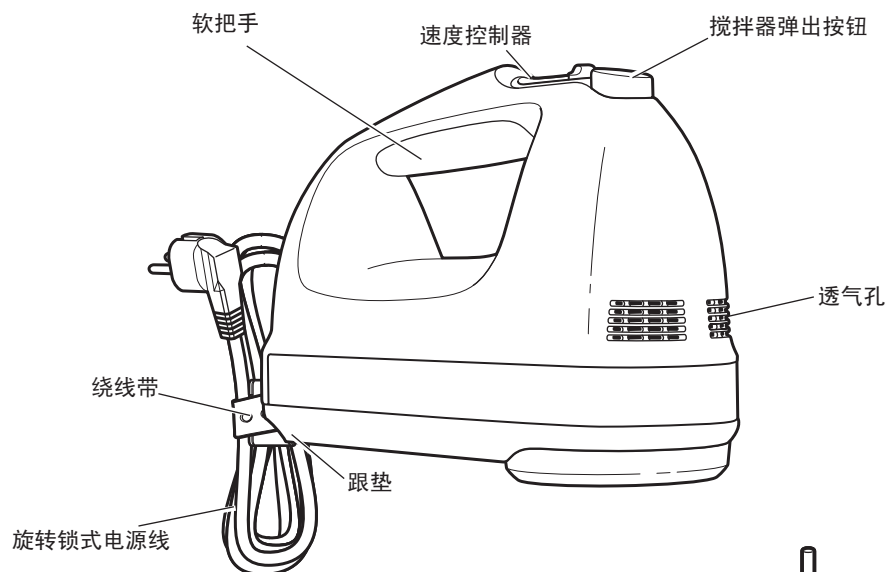

搅拌棒

 

面团钩

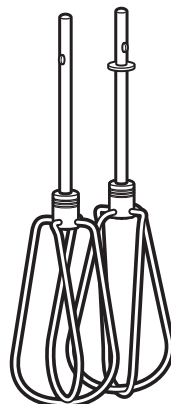 

涡轮搅拌器配件



16 线打蛋器



 
 
收纳袋





零部件和功能

配件指导

配件	用途
涡轮搅拌器配件 	曲奇面团 蛋糕面糊
搅拌棒 	冰沙 奶昔 酱汁 沙拉酱调料
面团钩 	酵母面包面团
16 线打蛋器 	奶油 打发蛋白 酱汁 布丁
收纳袋 	存放配件



手持式搅拌机安全措施

您的安全和其他人的安全非常重要。

我们已在本手册以及您的家电上提供了许多重要的安全信息。请务必阅读并遵循所有安全消息。



这是安全警示符号。

此符号警示您可能导致您和他人伤亡的潜在危险。

所有安全信息都有安全警示符号和警示语“危险”或“警告”。这些词的含义是：

 **危险**

如果不立即遵守说明，可能导致 **死亡** 或 **重伤**。

 **警告**

如果不遵守说明，可能导致**死亡或重伤**。

所有安全信息都将指出潜在危险是什么，如何降低受伤的几率，以及不遵守说明将会发生什么。

重要保护措施

使用家用电器时，应始终遵循基本安全预防措施，包括：

1. 阅读所有说明。家电使用不当可能导致人员受伤。
2. 为了避免触电风险，切勿将手持式搅拌机放入水中或其他液体中。
3. 身体行动不便、感官或智力障碍或缺乏相关经验和知识者（包括儿童），除非受到其安全负责人对本家电使用的监督或指导，否则不得使用本家电。
4. 应对儿童进行监督，确保他们不玩本家电。
5. 由儿童使用或在儿童附近使用任何家电时，需要密切监督。
6. 如果电源线损坏，必须由制造商、服务代理或类似合格人员进行更换以避免发生危险。
7. 切勿使本家电在无人看管状态下运行。
8. 不使用时、安装或拆卸零件前以及清洁前，从插座上拔下手持式搅拌机插头。
9. 避免接触移动部件。在操作期间让手、头发、衣物以及刮刀和其他餐具远离所有配件以降低人员受伤和/或损坏手持式搅拌机的风险。





手持式搅拌机安全措施

10. 若手持式搅拌机的线缆或插头受损，或者手持式搅拌机发生故障，或出现跌落或任何形式的损坏后，请勿操作。家电的检查、维修或调整请至最近的授权服务中心。
11. 使用并非 KitchenAid 推荐或出售的附件可能会引起火灾、触电或损伤。
12. 请勿在户外使用手持式搅拌机。
13. 请勿将电线悬挂在桌子或厨房台面边缘或者接触热表面。
14. 请勿让线缆接触热烫表面，包括炉子。
15. 清洗之前，应取出手持式搅拌机配件。
16. 请勿将家电用于非预期用途。
17. 请参考“保养与清洁”部分，了解接触食物的表面的清洁说明。
18. 本家电适合在家庭或类似环境中使用，如：
 - 商店、办公室或其他工作环境中的员工厨房；
 - 农舍；
 - 由酒店、汽车旅馆和其他住宿环境中的顾客使用；
 - 民宿型环境。

保留这些说明

电气要求

警告



触电危险

插入接地的插座。

请勿去除接地插针。

不要使用适配器。

不要使用延长线。

不遵守这些说明可导致死亡、火灾或触电。

电压：220-240 V

频率：50-60 Hz

瓦数：85 W

注意：如果插头无法插到插座中，请联系有资质的电工。不要以任何方式改动插头。不要使用适配器。



使用您的手持式搅拌机

速度控制器指导



9 速手持式搅拌机始终以最低速度（速度 1）启动。根据需提高速度；速度设定指示控制器将会亮起並显示每个速度的对应数字。

速度	附件	描述
1		用于慢速搅拌、组合，以及开始所有搅拌程序。使用这个速度搅拌坚果、巧克力片、乳酪絲、洋葱、橄榄和其他厚块成分。
2	 	将面粉和其他干燥成分与液体或其他潮湿的混合物混合。 使用面团钩揉搓酵母面团（面包、比萨面团）。
3		混合稀面糊，如煎饼或华夫饼面糊。
4		混合重的混合物，如曲奇或饼干面团。
5		混合厚面团，如松饼或蛋糕面糊。捣碎土豆或南瓜。
6		混合黄油和糖。混合霜状白糖。
7		完成混合蛋糕和其他面糊。
8	 	搅打奶油和慕斯混合物。 混合液体材料（奶昔、酱汁）和乳化沙拉酱调料。
9	 	打蛋白和蛋白甜饼混合物。 混合液体材料（奶昔、酱汁）和乳化沙拉酱调料。

注意：若要混合和搓揉面团，请使用面团钩。涡轮搅拌器配件不适合用于此目的。





使用您的手持式搅拌机

操作速度控制器

您的 KitchenAid 手持式搅拌机和其他大多数电动手持式搅拌机相比，搅拌的速度更快，并且搅拌程度更彻底。因此，必须对大多数配方中的搅拌时间进行调整，防止过度搅拌。较大搅拌机尺寸的搅拌时间将较快。

为了帮助确定理想的搅拌时间，请观察面糊或面团，将其混合到配方中所需外观即可，例如“光滑乳脂状”。要选择最佳的搅拌速度，请使用“速度控制器指导”部分。

 


警告

受伤危险


在触碰搅拌器之前务必拔下搅拌机的插头。

否则可导致骨折、割伤或瘀伤。

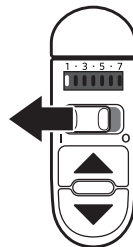


1

 将手持式搅拌机插头插入电源插座。将电源开关拨到“1”（开）位置。电机将以速度 1 自动启动，速度指示控制器上的“1”将会亮起。

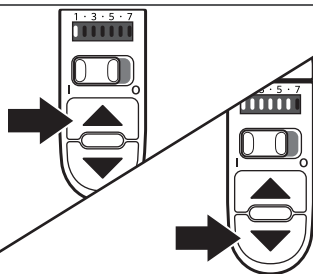

2

 点按“向上（箭头）”按钮，将搅拌速度提高到所需的设置。如有必要，可点按“向下（箭头）”按钮以降低搅拌速度。有关更多信息，请参见“速度控制器指导”。

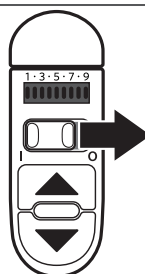

3

完成搅拌工作后，将电源开关拨到“0”（关）位置。卸下配件之前，请拔下手持式搅拌机插头。

注意：无论关闭搅拌机时的速度设置如何，每次开机时手持式搅拌机都会自动以速度 1 启动。



设置您的手持式搅拌机

连接配件

⚠ 警告

 
 
受伤危险

在触碰搅拌器之前务必拔下搅拌机的插头。

否则可导致骨折、割伤或瘀伤。


重要信息：请务必阅读并遵循本手册中的具体说明以正确使用手持式搅拌机。

从电源插座上拔下手持式搅拌机插头。

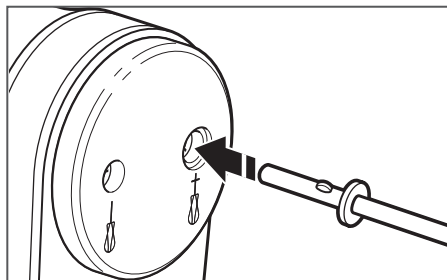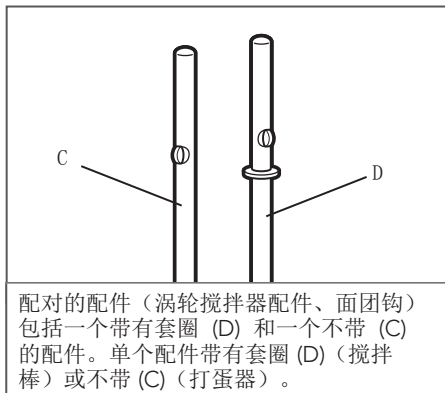

1

 将带有套圈 (D) 的配件轴插入手持式搅拌机上的较大开口 (B) 中。将轴上的法兰与开口中的槽对齐。推入锁定到位。

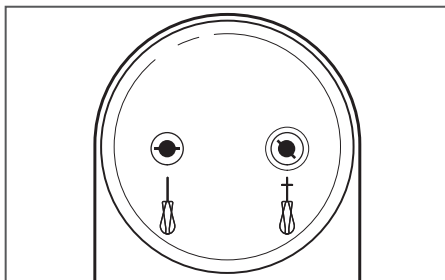


2

将不带套圈 (C) 的配件插入较小开口 (A) 中。对齐并推入锁定到位。


注意：不带套圈的配件轴可用于任一开口(A 或 B)。带套圈的配件轴仅可用于较大开口 (B)。

 拆卸配件

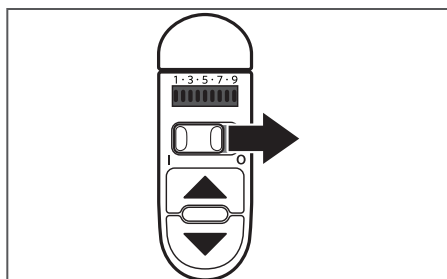

1

 如果手持式搅拌机正在运行，请将电源开关拨到“O”（关闭）位置，停止手持式搅拌机。从电源插座上拔下手持式搅拌机插头。

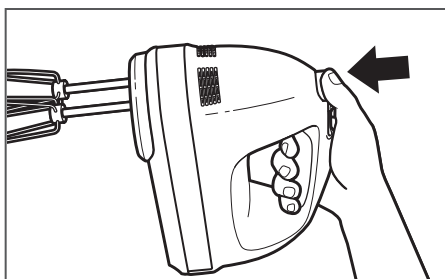

2

按下弹出按钮松开手持式搅拌机配件，然后将其卸下。





保养和清洁

清洁手持式搅拌机身

⚠ 警告



触电危险

切勿浸泡在水中。
这样做可导致死亡或触电。

 
⚠ 警告

受伤危险


在触碰搅拌器之前务必拔下搅拌机的插头。

否则可导致骨折、割伤或瘀伤。

注意：不要将手持式搅拌机浸在水中。

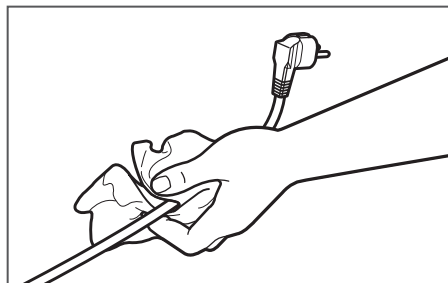


1 在清洁之前始终拔下手持式搅拌机插头。用湿布擦拭电源线和绕线带。用软布擦干。

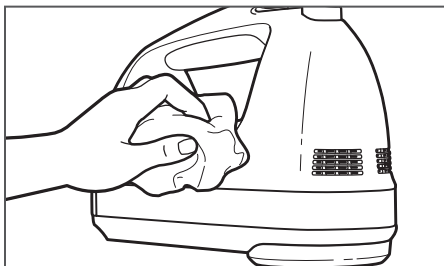 

2 请使用湿布擦拭手持式搅拌机。用软布擦干。

 清洁配件

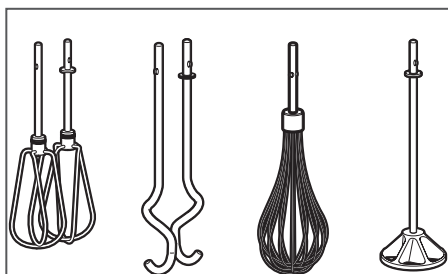

1 清洁之前，始终取出手持式搅拌机配件。用洗碗机清洗，或用温肥皂水手洗。冲洗并擦干。



2 热水机洗，低速甩干。或者用蘸取了温的肥皂水的抹布擦拭干净。





故障排除

如果手持式搅拌机发生故障或无法操作

请首先尝试这里建议的解决方案，这样可能就避免维修费用。

1. 手持式搅拌机是否已插入？
2. 手持式搅拌机电路中的保险丝是否正常工作？如果您有断路器箱，请确保将电路关闭。
3. 尝试拔下手持式搅拌机，然后重新插入。

如果采用本部分提供的步骤无法解决问题，请联系授权的服务中心。请勿将手持式搅拌机退还给零售商；因为他们不提供维修。

产品中有害物质的名称及含量 (Hazards substance content information)

Part Names 部件名稱	Name Hazardous Substances 有害物质名称					
	Lead (Pb) 铅 (Pb)	Mercury (Hg) 汞 (Hg)	Cadmium (Cd) 镉 (Cd)	Hexavalent Chromium (Cr (VI)) 六价铬 (Cr (VI))	Polybrominated biphenyls (PBB) 多溴联苯 (PBB)	Polybromin- ateddiphenyl ethers (PBDE) 多溴二苯醚 (PBDE)
内外壳 (enclosure)	o	o	o	o	o	o
电路板 (PCB assembly)	x	o	o	o	o	o
马达(motor)	o	o	o	o	o	o
电源线 (cord set)	x	o	o	o	o	o

This table is prepared in accordance with the provisions of SJ/T 11364.

此表格是按照 SJ/T 11364 的规定编制的。

o: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

o: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下

x: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

x: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

 在中华人民共和国境内销售的电子电气产品上将印有“环保使用期”(EPuP) 符号 (electrical product should be marked this lab)。圆圈中的数字代表产品的正常环保使用年限 (number 10 mean the product environmental service life is 10 years)。





手持式搅拌机产品食品接触用信息 (Food contact information for product KitchenAid Stand Mixer)

请根据说明书要求正常使用本产品，本产品食品接触用材料及部件符合 GB 4806.1-2016 和相应食品安全国家标准要求，具体信息如下

(Please use this product according to the user guide, food contact material complied with GB 4806.1-2016 and other Nation food safety standards, see below table for details):

食品接触用材料 (Food contact material)		用途(Function) / 部件名称 (Part name)	标准 (Standard)	备注 (Remark)
金属 (Metal)	不锈钢 (SUS202)	搅拌棒 Beater Wand	GB4806.9-2016	
	不锈钢 (SUS202)	和面棒Dough Hook Wand		
	不锈钢 (SUS202)	搅拌棒 Blender Wand		
	不锈钢 (SUS304)	打蛋棒 Whisk		
塑料 (Plastic)	共聚酯 (POM) (CAS: 24969-26-4)	搅拌棒叶轮 Impeller of Blender Wand	GB4806.7-2016	
		打蛋棒连接器 Inside carrier of whisk	GB4806.7-2016	

注(Remark): 本系列产品包含以上食品接触材料，部分机型可能不含个别材料，以实际产品为准。(above food contact material applicable for all this product series, some food contact material maybe not applicable for specific Product)

©2019 保留所有权利。

技术参数如有更改，恕不另行通知。





KitchenAid

©2019 All rights reserved.
Specifications subject to change without notice.
保留所有权利。
技术参数如有更改，恕不另行通知。



W11192938B

02/19

