



 
KitchenAid

5 Cup Cordless Food Chopper 5KFCB519A





PARTS AND FEATURES

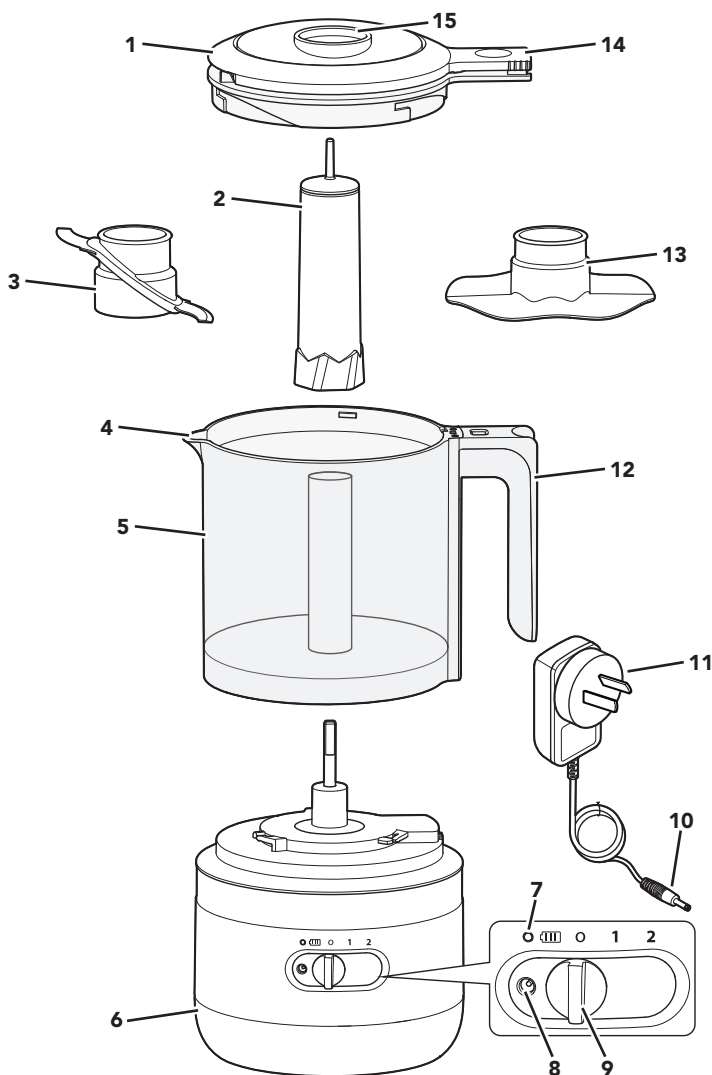

- 1 Lid
- 2 Drive Adapter
- 3 Multipurpose Blade
- 4 Pour Spout
- 5 Bowl (5 Cup/1.18 Litre)
- 6 Base
- 7 Battery Status Indicator
- 8 Charging Port

- 9 Speed Controller
- 10 Charger Adapter Pin
- 11 Charger Adapter
- 12 Handle
- 13 Whisking Accessory
- 14 Pulse/On Button
- 15 Drizzle Basin





PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put the Base of Cordless Food Chopper, Charger Adapter, cord, or electrical plug in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Turn the appliance OFF when not in use, before assembling or disassembling parts and before cleaning. To unplug the charger, grasp the plug and pull from the outlet. Never pull from the power cord.
7. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
8. Avoid contacting moving parts.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
10. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
11. Do not use the appliance outdoors.
12. Do not let cord hang over edge of table or counter.
13. The appliance contains batteries that are non-replaceable.



PRODUCT SAFETY

14. Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to person, or damage to the Cordless Food Chopper. A scraper may be used, but only when the Cordless Food Chopper is not running.
15. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the jar and during cleaning.
16. To reduce the risk of injury, never place cutting blade on Base without first putting bowl properly in place.
17. Be certain cover is securely locked in place before operating the Cordless Food Chopper.
18. Do not attempt to defeat the cover interlock mechanism.
19. Do not use an extension cord. Plug charger directly into an electric outlet.
20. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
21. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
22. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.
23. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
24. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, or other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
25. Be careful if hot liquid is poured into the Cordless Food Chopper as it can be ejected out of the appliance due to a sudden steaming.

SAVE THESE INSTRUCTIONS





PRODUCT SAFETY

ELECTRICAL REQUIREMENTS

Charger Adapter:

Input: 220-240 V~ 50-60 Hz

Cordless Food Chopper:

Voltage: 12 V

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

A short power supply cord (or detachable power supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.



GETTING STARTED

BEFORE FIRST USE

1. Charge the battery until the Battery Status Indicator turns solid green.
2. Clean all the parts (see "Care and Cleaning" section).
3. Remove all packaging materials, if present.

BATTERY STATUS

Battery status	% Battery status	Full charge*	Quick charge**
Green	30% to 100%	40 Onions	11 Onions
Yellow	15% to 30% (Consider charging)		
Red	Lower than 15% (Need to charge soon)		

General Battery Tips & Maintenance:

- Consider charging the appliance when the Battery Status Indicator is yellow.
- Remove the appliance from charger when finished charging.
- It is best to store the appliance at room temperature (60-80 °F / 15-25 °C) and away from moisture.
- Avoid exposing to temperatures above 120 °F / 50 °C.

NOTE: Battery life is impacted by factors such as battery age and use.

*Full Charge:

The Cordless Food Chopper will be fully charged in 2 hours and 40 minutes. The Battery Status Indicator pulses when it charges and turns to solid green with a full charge. The Cordless Food Chopper will chop approximately 40 onions (weighing around 90 - 110 grams each) when following the recommended battery maintenance.

**Quick Charge:

In 10 minutes, the Cordless Food Chopper will quick charge. The Cordless Food Chopper will chop approximately 11 onions (weighing around 90 - 110 grams each) with one quick charge when following the recommended battery maintenance.

SUGGESTED FOOD ITEMS – MULTIPURPOSE BLADE

Food	Quantity	Preparation	Speed	Pulse*
Beef	0.7 lb (317 gm)	Cut into 2.5 cm (1 inch) cubes	High	Quick pulse 10 to 15 times
Bread, Cookies, or Crackers	up to 4 cups	Break bread, crackers, or cookies into pieces that fit into Bowl before processing.	High	Quick pulse 20 to 30 times
Cooked fruits and vegetables	up to 2.5 cups	Cut into 2.5 cm (1 inch) cubes	High	Quick pulse 10 to 15 times
Herbs and Spices	up to 4 cups	Add herbs and spices as they are; no preparation needed.	High	Quick pulse 20 to 30 times
Nuts	up to 2.5 cups	Place in whole nuts	High	Quick pulse 15 to 20 times
Raw fruits and vegetables	up to 3 cups	Cut into 2.5 cm (1 inch) cubes	High	Quick pulse 6 to 10 times

*Processing settings are approximate.

Actual settings may vary depending on quality of food and desired chop size.

TIP: A Quick Pulse is one second On and one second Off operation.





GETTING STARTED


WHISKING ACCESSORY RECOMMENDATIONS CHART

The whisking accessory can be used to incorporate air into foods such as eggs, egg whites, heavy cream, mayonnaise, etc. Use the drizzle basin and pour spout to easily make mayonnaise or dressings.


Suggested Food	Food Preparation	Amount	Processing Time	Setting
Eggs and Egg whites	Remove eggs from shells; separate yolks from whites as needed; use 1/8 tsp cream of tartar per egg.	Up to 420 ml (1.5 cups)	60 seconds	Speed 1
Heavy Cream	Add cream and desired flavours to work bowl.	Up to 240 ml (1 cup)	30 seconds	Speed 2
Emulsions (Mayonnaise, Aioli, Salad dressing)	Add ingredients to work bowl; use the drizzle basin while mixing to add oils.	Up to 350 ml (1.5 cups)	60 seconds	Speed 2

TIP: Do not operate Whisk Accessory continuously for more than 60 seconds.

 
BATTERY CHARGING

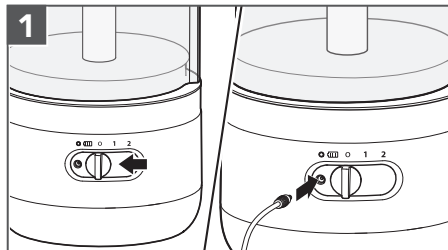

 First, slide the Speed Controller to "0". Then, insert the Charger Adapter Pin into the Charging Port.

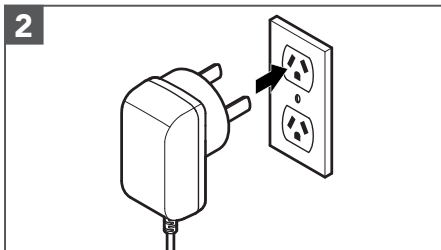

 Plug the Charger Adapter into electrical outlet.

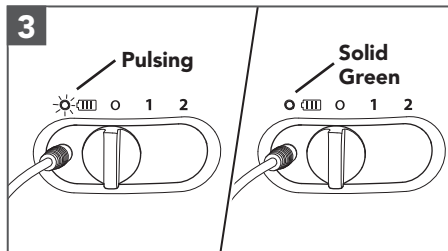


The Battery Status Indicator pulses when it charges. It will be fully charged in 2 hours and 40 minutes and the Battery Status Indicator turns solid green.






PRODUCT USAGE

 
IMPORTANT: Make sure the Cordless Food Chopper is charged before using.

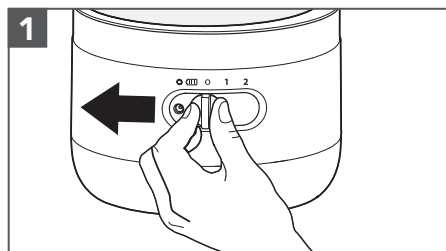

 
Make sure that the Speed Controller is at "O" position before attaching or removing any parts.

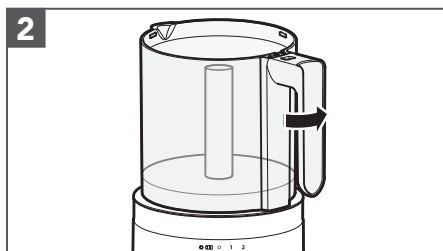

 Hold the Handle facing front on the Base. Twist and lock the Bowl in the slots of the Base.

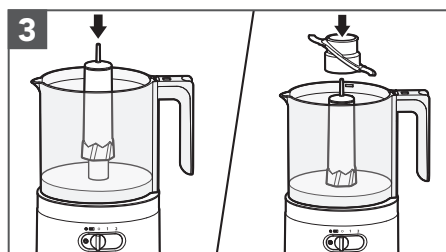


 Rotate and lower the Drive Adapter and then Multipurpose Blade or optional Whisking Accessory in the centre of the Bowl until it rests at the bottom.

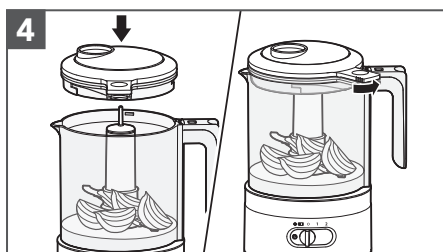


Add ingredients to the Bowl. Place the Lid on the Bowl. Twist and lock it into place. The Lid will click when properly locked into place.

 NOTE: The Cordless Food Chopper will operate with either the Multipurpose Blade or the Whisking Accessory in place, not both. Do not try to use both at the same time.

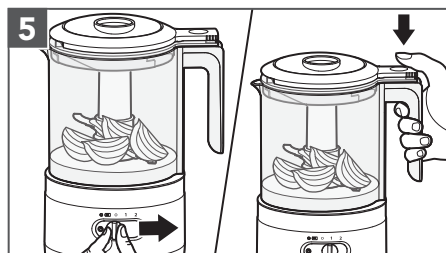

 Slide the Speed Controller to your desired setting (1 or 2).
Press down the Pulse/On Button to start.

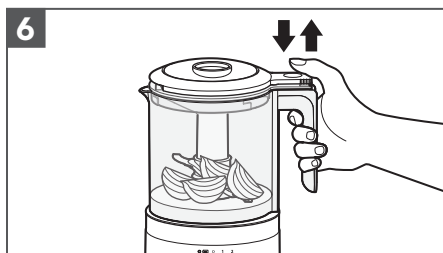

For a coarse chop, use a pulsing motion to rapidly press and release the Pulse/On Button until your desired results are achieved.

IMPORTANT: The Bowl and Lid must be locked into place for the Cordless Food Chopper to operate.



 


PRODUCT USAGE

Use the Drizzle Basin to conveniently add liquid ingredients while processing dressings, mayonnaises, sauces, and more. Use the Pour Spout for easier serving.




Slowly pour liquids, such as oil, in the Drizzle Basin. The liquid will be efficiently and thoroughly mixed into the ingredients as they spin inside the Bowl.

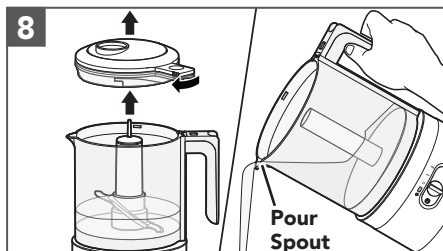


Once processing is complete, remove the Lid, Drive Adapter, and Multipurpose Blade to use the Pour Spout.

CARE AND CLEANING

 
IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance. Also make sure that the Speed Controller is at "O" position. Unplug before removing, attaching parts, or before cleaning.

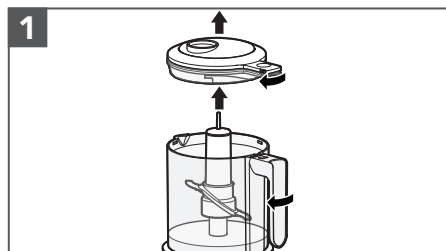

 Remove the Lid, Multipurpose Blade, and Drive Adapter. Hold the Base steady. Twist and lift the Bowl to unlock from the Base.

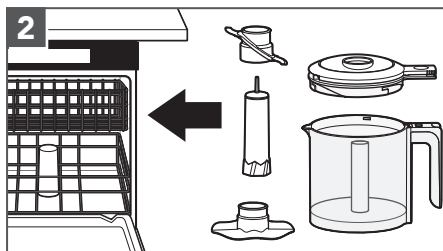

 Dishwasher-safe, top rack only: Bowl, Lid, Whisking Accessory, Drive Adapter, and Multipurpose Blade.

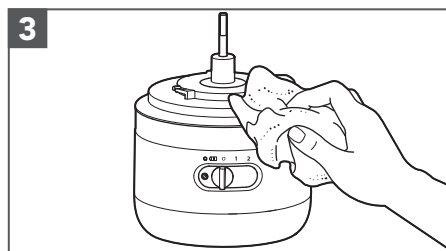

Wipe the Base with a damp cloth. Do not immerse the Base in water.

NOTE: Mild dish soap may be used, but do not use abrasive cleaners.

NOTE: For convenient storage, always reassemble the Cordless Food Chopper after cleaning.

For detailed information on the Cordless Food Chopper:

Visit www.KitchenAid.com.au for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Cordless Food Chopper.





TROUBLESHOOTING GUIDE

Problem	Solution
If the Cordless Food Chopper fails to start:	Check if the Cordless Food Chopper is charged. Charge the battery when the Battery Status Indicator is red or when the battery is completely drained.
	Make sure that the Bowl and Lid are properly aligned and locked into place.
If the Cordless Food Chopper is not getting charged:	If you have a circuit breaker box, check to make sure that the circuit is closed.
If the problem cannot be corrected:	See the "Customer Service" sections. Do not return the Cordless Food Chopper to the retailer – retailers do not provide service.



CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 02 49026500

Address Australia:

KitchenAid Australia Pty Ltd
6-8 Billbrooke Close
Cameron Park NSW 2285, Australia
Phone: 1-800-990-990
Mobile: 0249026500
Email: enquiries@kitchenaid.com.au

In New Zealand:

Website: www.kitchenaid.co.nz
Email: enquiries@kitchenaid.co.nz
Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.com.au



KitchenAid

©2022 All rights reserved.

W11419337C

03/22

