




KitchenAid

Food Chopper
5KFC3516T





PARTS AND FEATURES

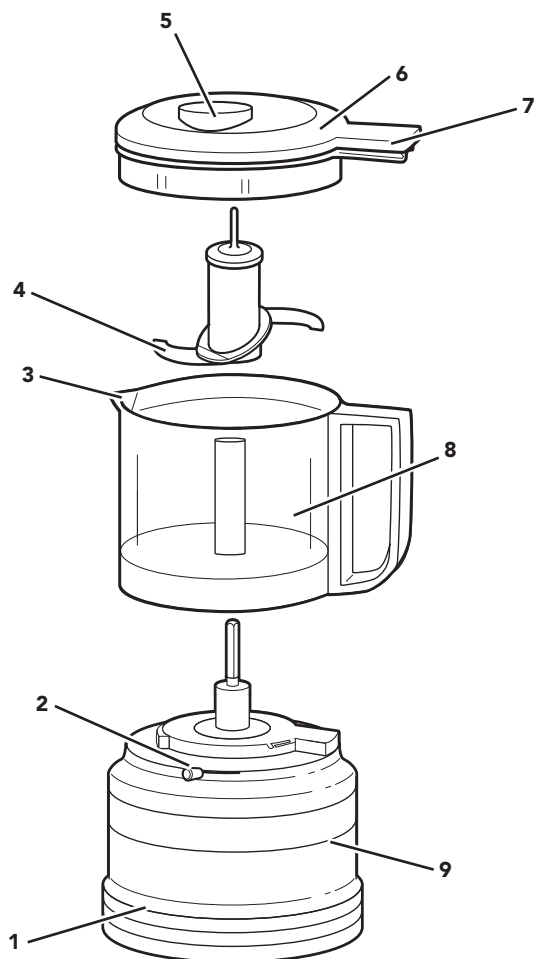

- | | | | |
|---|------------------------------------|---|-----------------------|
| 1 | Power Cord Wrap | 6 | Lid |
| 2 | Speed Selection Lever | 7 | PULSE/ON Button |
| 3 | Pour Spout | 8 | Work Bowl with Handle |
| 4 | Stainless Steel Multipurpose Blade | 9 | Heavy-Duty Base |
| 5 | Drizzle Basin | | |





PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Food Chopper in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contacting moving parts.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments/accessories not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
9. Do not use the Food Chopper outdoors.
10. Do not let cord hang over edge of table or counter.
11. Keep hands and utensils away from moving blades while processing food to reduce the risk of severe injury to persons or damage to the Food Chopper. A scraper may be used but must be used only when the Food Chopper is not running.
12. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl, and during cleaning.



PRODUCT SAFETY

13. Never leave the appliance unattended while it is in operation.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
15. Turn the appliance to OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
16. To reduce the risk of injury, never place cutting Blade on Base without first putting bowl properly in place.
17. Be certain cover is securely locked in place before operating appliance.
18. Refer to the "Care and Cleaning" section for instructions on cleaning the surfaces in contact with food.
19. Do not attempt to defeat the cover interlock mechanism.
20. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
21. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
22. Be careful if hot liquid is poured into the Food Chopper as it can be ejected out of the appliance due to a sudden steaming.

SAVE THESE INSTRUCTIONS

ELECTRICAL REQUIREMENTS

**WARNING**



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 V

Frequency: 50-60 Hz

Wattage: 240 W

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.





PRODUCT USAGE

SPEED RECOMMENDATIONS CHART

Use the Food Chopper to chop raw fruits and vegetables or nuts, and mince parsley, chives, or garlic for easy preparation in your favourite recipes. Purée cooked fruit or vegetables to make baby food or to use as bases for soups or sauces. You can also make bread crumbs or grind raw meat. Use the Drizzle Basin and Pour Spout to easily make mayonnaise or dressings.

NOTE: For best results, larger food items should be cut into approximately 2.54 cm cubes before processing. This step also allows processing of more food at a single time.

IMPORTANT: Do not process coffee beans or hard spices such as nutmeg, which may damage the Food Chopper.

SUGGESTED FOOD	PREPARE FOR PROCESSING	AMOUNT	SPEED
RAW FRUITS & VEGETABLES	Cut into 2.54 cm pieces.	Up to 350 g (3 cups)	1 or 2
COOKED FRUITS & VEGETABLES	Cut into 2.54 cm pieces.	Up to 300 g (2.5 cups)	2
LIQUIDS/ EMULSIONS (SUCH AS MAYONNAISE OR SALAD DRESSINGS)	Place dry ingredients or thicker wet ingredients in Work Bowl; then use the Drizzle Basin to add oils or liquids to the mixture during use.	Up to 200 g (1.5 cups)	2
MEAT	Meat should be raw and cut into 2.54 cm pieces for best processing results.	Up to 227 g at one time	1 or 2
HERBS & SPICES	Add herbs and spices as they are; no preparation needed.	Up to 350 g (3 cups)	1
BREAD, COOKIES, OR CRACKERS	Break bread, crackers, or cookies into pieces that fit into the bowl before pro- cessing.	Up to 350 g (3 cups)	1
NUTS	Add nuts as they are; no preparation needed.	Up to 350 g (3 cups)	2

TIP: For better consistency, or to achieve coarsely chopped results, use the Pulse operation.



PRODUCT USAGE

PREPARING THE FOOD CHOPPER FOR USE


Before first use

Before using the Food Chopper for the first time, wash the Work Bowl, Lid, and Blade in hot, soapy water. Work bowl, Lid, and Blade may also be washed in the top rack of a dishwasher.


For convenient storage, always reassemble the Food Chopper after cleaning.

DISASSEMBLING THE FOOD CHOPPER

Follow these instructions to disassemble the Food Chopper for cleaning and when removing ingredients from the Work Bowl.

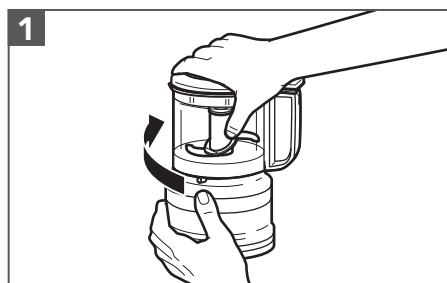

Be sure the Food Chopper is unplugged. Hold the Lid as shown and rotate it clockwise to unlock. Then lift the Lid off of the Work Bowl.

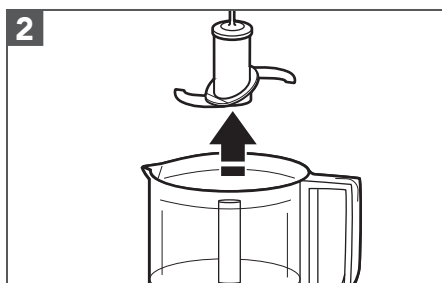

Pull the Blade straight up to unlock and remove it from the Work Bowl.




Hold the Base steady with one hand, and use the other hand to rotate the Work Bowl clockwise to unlock and lift it off of the Base.






PRODUCT USAGE

ASSEMBLING AND RUNNING THE FOOD CHOPPER

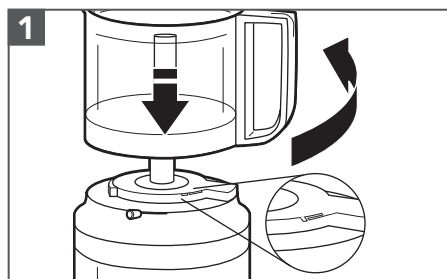


1 Be sure the Food Chopper is unplugged. Start with the Work Bowl handle facing front on the Base. Rotate the handle 90° counterclockwise to lock into place. When assembled properly, the handle will face the right side.

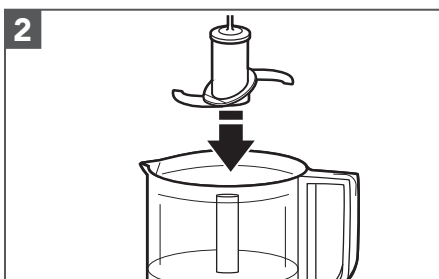

2 Fit the Blade over the shaft in the centre of the Work Bowl, rotate and press down until it locks into position.



3 Place ingredients to be processed inside the Work Bowl. For uniform consistency of processed foods, cut fruits, vegetables, and meats into 2.54 cm pieces.

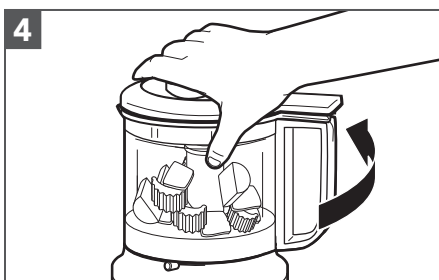


4 Place the Lid on the Work Bowl with the Lid handle facing front. Rotate the Lid handle to the right. The Lid will click when locked into place. Rotate the Lid counterclockwise to lock into place.

IMPORTANT: Do not process coffee beans or hard spices such as nutmeg, which may damage the Food Chopper.


NOTE: The Work Bowl and Lid must be locked into place for the Food Chopper to operate.



PRODUCT USAGE

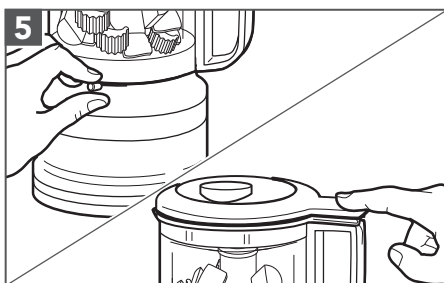


Slide the Speed Lever to your desired setting. Press down on the PULSE/ON Button to start the Food Chopper. Do not chop any food for more than 30 seconds continuously; pause between uses.

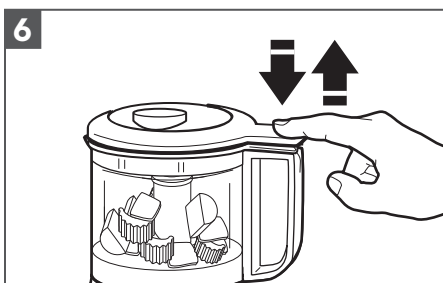


For a coarse chop, use a pulsing motion to rapidly press and release the PULSE/ON Button until your desired results are achieved.

USING THE DRIZZLE BASIN AND POUR SPOUT

Use the Drizzle Basin to conveniently add liquid ingredients while processing, to make dressings, mayonnaises, emulsions, sauces, and more. Use the Pour Spout for easier serving.

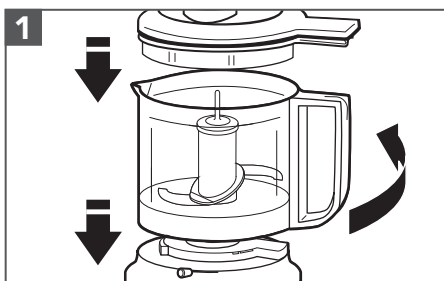


Place the Lid on the Work Bowl with the Lid handle facing front. Rotate the Lid handle to the right. Rotate the Lid counterclockwise to lock into place.

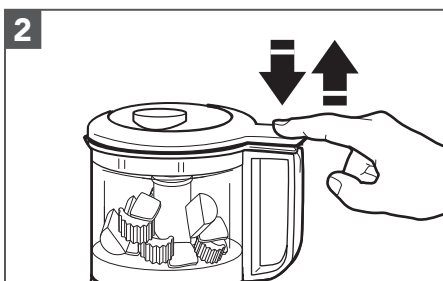

Press rapidly up and down on the PULSE/ON Button to get your ingredients moving in the Work Bowl.



Slowly pour liquids, such as oil, into the Drizzle Basin. The liquid will be efficiently and thoroughly mixed into the ingredients as they spin inside the Work Bowl.

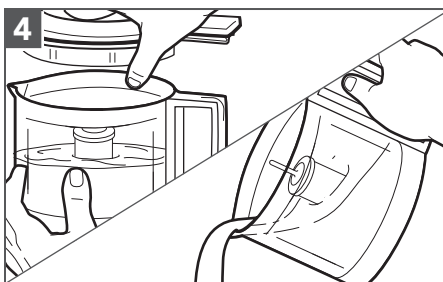





Once processing is complete, remove the Lid to use the Pour Spout.





CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

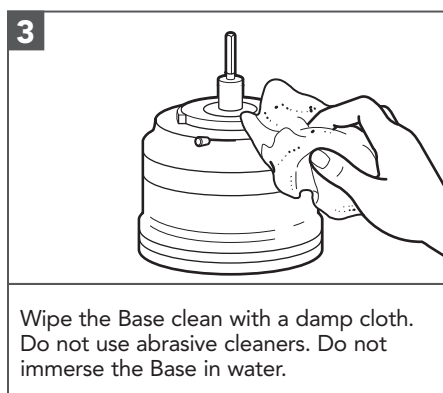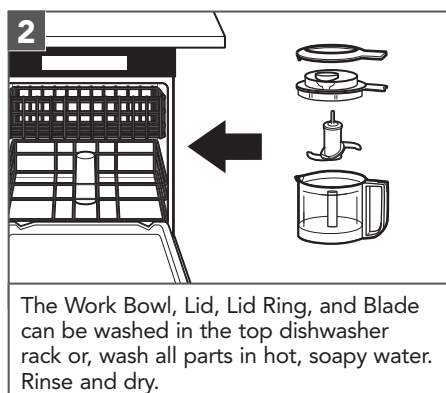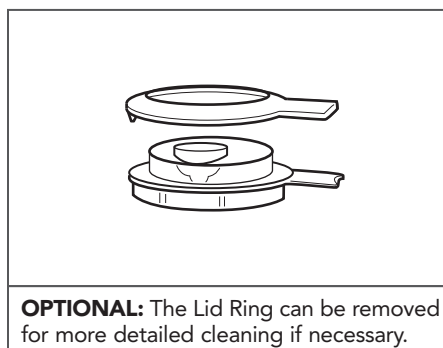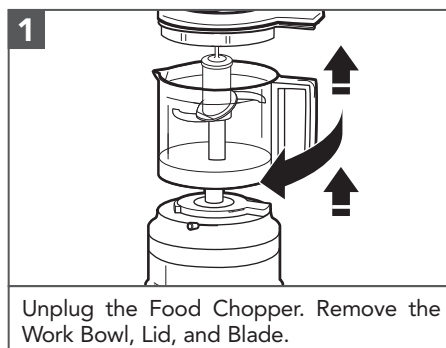

TIP: Wrap the cord counterclockwise around the Base for easy storage.

NOTE: For convenient storage, always reassemble the Food Chopper after cleaning.



TROUBLESHOOTING



⚠ WARNING

Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove an earth prong.

Do not use an adapter.

Do not use an extension cord.


Failure to follow these instructions can result in death, fire, or electrical shock.

PROBLEM	SOLUTION
If your Food Chopper should malfunction or fail to operate, check the following:	Is the Food Chopper plugged in?
	Make sure that the bowl and Lid are properly aligned and locked in place.
	Press the PULSE/ON Button with a rapid up and down motion. Do not hold down continuously.
	Unplug the Food Chopper, then plug it back into the outlet.
If the problem cannot be corrected:	Is the fuse in the circuit to the Food Chopper in working order? If you have a circuit breaker box, be sure the circuit is closed.
	Contact an Authorised Service Centre for assistance. Do not return the Food Chopper to the retailer – retailers do not provide service.





ส่วนประกอบและคุณสมบัติ

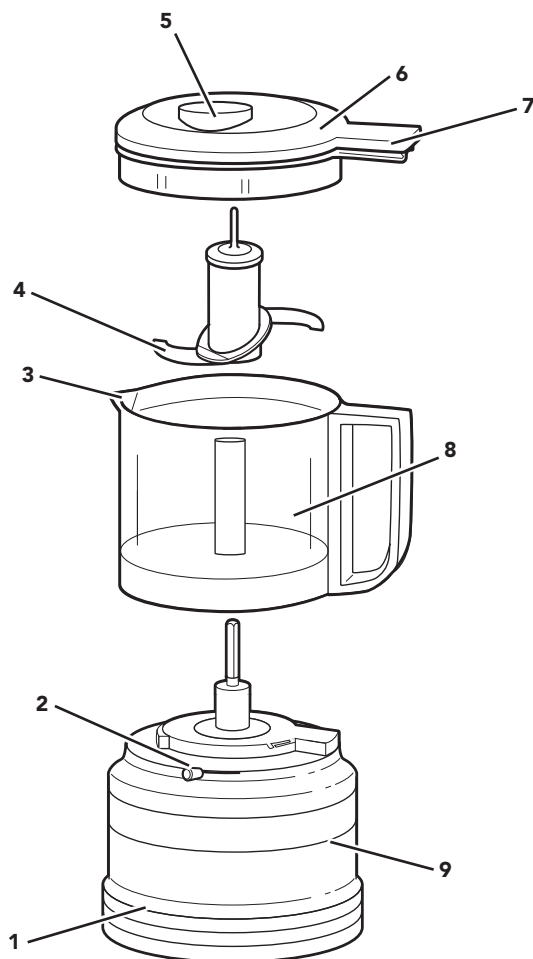

1 ที่รัดสายไฟ

2 แป้นปรับความเร็ว

3 ปากเทส่วนผสม

4 ใบพัดสแตนเลสตีลเอนกประสงค์

5 ช่องป้อนวัตถุดิบ

6 ฝาปิด

7 ปุ่ม PULSE/ON

8 อ่างบดพร้อมมือจับ

9 ฐานเครื่องที่แข็งแรงเป็นพิเศษ

11





ความปลอดภัยของผลิตภัณฑ์

ความปลอดภัยของตัวเองและบุคคลอื่นเป็นสิ่งที่สำคัญมาก

เราให้คำแนะนำด้านความปลอดภัยที่สำคัญหลายประการไว้ในคู่มือนี้และบนเครื่องใช้ของคุณ โปรดอ่านและปฏิบัติตามคำแนะนำด้านความปลอดภัยเสมอ



นี่คือสัญลักษณ์การเตือนความปลอดภัย

สัญลักษณ์นี้เตือนคุณว่ามีอันตรายที่เป็นไปได้ที่อาจทำให้คุณหรือบุคคลอื่นๆ เสียชีวิตหรือได้รับบาดเจ็บได้

ข้อความด้านความปลอดภัยทั้งหมดจะเป็นไปตามสัญลักษณ์แจ้งเตือนด้านความปลอดภัย และระบุเป็น "อันตราย" หรือ "คำเตือน" คำเหล่านี้หมายถึง:

⚠️ อันตราย

คุณอาจเสียชีวิตหรือบาดเจ็บรุนแรงได้หากไม่ปฏิบัติตามคำแนะนำในทันที

⚠️ คำเตือน

คุณอาจเสียชีวิตหรือบาดเจ็บรุนแรงได้หากไม่ปฏิบัติตามคำแนะนำ

คำแนะนำด้านความปลอดภัยทั้งหมดจะแจ้งให้คุณทราบว่าจะไรคืออันตรายที่เป็นไปได้ บอกให้คุณทราบวิธีลดโอกาสการได้รับบาดเจ็บ และบอกให้คุณทราบว่าจะไรจะเกิดขึ้นหากไม่ทำตามคำแนะนำ

แนวทางการป้องกันที่สำคัญ

ขณะใช้อุปกรณ์ไฟฟ้า ให้ปฏิบัติตามมาตรการเฝ้าระวังด้านความปลอดภัยเบื้องต้นตลอดเวลา รวมทั้งปฏิบัติตามคำแนะนำต่อไปนี้

1. อ่านคำแนะนำทั้งหมดให้ครบถ้วน การใช้อุปกรณ์อย่างไม่ถูกต้องอาจทำให้เกิดการบาดเจ็บได้
2. โปรดอย่านำเครื่องปั่นอาหารจุ่มลงในน้ำหรือของเหลวอื่นๆ เพื่อป้องกันความเสี่ยงของไฟฟ้าดูด
3. อุปกรณ์ไม่ได้ออกแบบมาสำหรับใช้โดยบุคคล (หรือเด็ก) ที่มีข้อจำกัดทางร่างกาย ประสาทสัมผัส มีภาวะบกพร่องทางจิต หรือขาดประสบการณ์และความรู้ เว้นแต่มีคนที่คุณไว้วางใจด้านความปลอดภัยกำกับดูแลหรือให้คำแนะนำอย่างใกล้ชิดในการใช้
4. เด็กจะต้องมีคนคอยดูแลเพื่อให้แน่ใจว่าไม่มีการใช้เครื่องมืออย่างไม่เหมาะสม
5. ถอดปลั๊กจากเต้ารับไฟฟ้าเมื่อไม่ได้ใช้งาน ก่อนใส่หรือนำชิ้นส่วนใด ๆ ออก และก่อนทำความสะอาด
6. อย่าสัมผัสกับชิ้นส่วนที่เคลื่อนที่
7. อย่าใช้งานเครื่องใช้ที่สายไฟหรือปลั๊กไฟเสียหาย หรือหลังจากที่เครื่องใช้ทำงานผิดปกติ หรือตกจากที่สูง หรือได้รับความเสียหายในลักษณะใดๆ ส่งคืนอุปกรณ์กับศูนย์บริการที่ได้รับอนุญาตที่ใกล้ที่สุดเพื่อทำการตรวจสอบ ซ่อมแซม หรือเปลี่ยนส่วนประกอบทางไฟฟ้าและกลไกต่าง ๆ
8. การใช้อุปกรณ์ต่อพ่วง/อุปกรณ์เสริมที่ไม่ได้แนะนำหรือจำหน่ายโดย KitchenAid อาจทำให้เกิดเพลิงไหม้ ไฟฟ้าช็อตหรือการบาดเจ็บได้
9. อย่าใช้เครื่องบนสลับภายนอกอาคาร
10. อย่าให้สายไฟห้อยบนขอบโต๊ะหรือเคาเตอร์
11. ระวังมือและอุปกรณ์ต่าง ๆ เข้าไปปะทะกับใบมีดขณะกำลังบรรจวัตถุใบมีดเพื่อลดโอกาสที่จะเกิดการบาดเจ็บรุนแรงหรือความเสียหายต่อตัวเครื่อง สามารถใช้ใบปาดได้แต่เฉพาะขณะที่เครื่องบนสลับไม่ได้ทำงานเท่านั้น
12. ใบมีดมีความคม ใช้ความระมัดระวังขณะทำงานกับใบมีดที่คม ทั้งวัตถุดิบออกจากโถปั่นและระหว่างการทำความสะอาด
13. อย่าทิ้งเครื่องไว้ขณะทำงานโดยไม่มีคนดูแล
14. หากสายไฟเสียหาย จะต้องเปลี่ยนใหม่โดยผู้ผลิต ตัวแทนให้บริการหรือผู้เชี่ยวชาญเพื่อป้องกันอันตรายที่อาจเกิดขึ้น





ความปลอดภัยของผลิตภัณฑ์

15. ปิดเครื่องไปที่ OFF จากนั้นถอดปลั๊กจากเต้ารับไฟฟ้าเมื่อไม่ได้ใช้งาน ก่อนประกอบหรือถอดประกอบชิ้นส่วนและก่อนนำไปทำความสะอาด ถอดปลั๊กโดยจับที่หัวปลั๊กแล้วดึงออกจากเต้ารับไฟฟ้า อย่าดึงที่ตัวสายไฟ
16. เพื่อลดความเสี่ยงจากการบาดเจ็บ ห้ามติดตั้งใบมีดไว้ที่ฐานเครื่องโดยไม่ติดตั้งโถปั่นเข้าที่ก่อน
17. โปรดตรวจสอบให้แน่ใจว่าฝาครอบล็อกแน่นก่อนใช้งานเครื่องใช้
18. ดูคำแนะนำในการทำความสะดวกพื้นผิวที่สัมผัสกับอาหารได้จากหัวข้อ “การดูแลและทำความสะอาด”
19. อย่าพยายามแก้ไขกลไกการล็อกฝาครอบ
20. ปลอ่ยให้อุปกรณ์เย็นลงให้สนิทก่อนวางหรือถอดชิ้นส่วน และก่อนทำความสะอาดตัวเครื่อง
21. เครื่องใช้นี้ออกแบบมาเพื่อให้ใช้งานในครัวเรือนและการใช้งานที่คล้ายกัน เช่น:
 - โดยเจ้าหน้าที่ครัวในร้านค้า สำนักงานหรือสภาพแวดล้อมในการทำงานอื่น ๆ
 - ฟาร์มเฮาส์
 - โดยลูกค้าโรงแรม โมเต็ลและที่พักรื่นอื่น ๆ
 - สถานที่บริการแบบฟักค่างคืนพร้อมอาหารเช้า
22. พึงใช้ความระมัดระวังหากต้องเทของเหลวร้อนลงไปเครื่องปั่นอาหารนี้ เนื่องจากอาจกระเซ็นออกมาจากเครื่องได้อันเนื่องมาจากการเกิดไอน้ำร้อนที่ทันใด

บันทึกคำแนะนำเหล่านี้ไว้

ข้อกำหนดทางไฟฟ้า

**คำเตือน**



อันตรายจากไฟฟ้าช็อต

เสี่ยงเข้ากับเต้ารับที่มีสายดินนี้

อย่าตัดขาลงกราวด์

อย่าใช้หัวต่อ

อย่าใช้สายพ่วง

หากไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เสียชีวิต เกิดเพลิงไหม้หรือไฟฟ้าช็อตได้

แรงดันไฟฟ้า: 220-240 V

ความถี่: 50-60 Hz

กำลังไฟ: 240 W

หมายเหตุ: ถ้าปลั๊กไฟไม่เข้ากับเต้าเสียบโปรดติดต่อช่างไฟฟ้าที่มีคุณสมบัติ อย่าดัดแปลงปลั๊กเสียบเองโดยเด็ดขาด





การใช้ผลิตภัณฑ์

คำแนะนำในการใช้ความเร็วระดับต่าง ๆ

ใช้เครื่องบดสับเพื่อบดสับผลไม้สดและผักหรือถั่ว และเพื่อบดผักชีฝรั่ง กุยช่ายหรือกระเทียมเพื่อให้เตรียมอาหารได้ง่ายขึ้นสำหรับเมนูโปรดของคุณ ผักและผลไม้ในรูปแบบเพียวเรเพื่อทำเป็นอาหารสำหรับเด็กทารกหรือเพื่อใช้เป็นวัตถุดิบสำหรับทำน้ำซุสหรือน้ำซอส นอกจากนี้คุณยังสามารถทำเบรตครีมหรือน้ำสลัดได้ ใช้ช่องบดวัตถุดิบและปากเทส่วนผสมเพื่อให้สะดวกในการทำมายองเนสหรือน้ำสลัด

หมายเหตุ: เพื่อให้ได้ผลดีที่สุด วัตถุดิบขนาดใหญ่ให้ตัดเป็นลูกเต๋ายาวขนาดประมาณ 2.54 ซม. ก่อนบด ขั้นตอนนี้ยังช่วยให้สามารถเตรียมวัตถุดิบปริมาณมากได้ในคราวเดียว

ข้อสำคัญ: อย่าบดเมล็ดกาแฟหรือเครื่องเทศเนื้อแข็ง เช่น ลูกจันทน์ เนื่องจากอาจทำให้เครื่องบดเสียหาย

วัตถุดิบอาหารที่แนะนำ	เตรียมวัตถุดิบสำหรับบดสับ	ปริมาณ	ความเร็ว
ผักผลไม้สด	ตัดเป็นลูกเต๋ายาวขนาด 2.54 ซม.	สูงสุด 350 ก. (3 ถ้วย)	1 หรือ 2
ผักผลไม้ปรุงสุก	ตัดเป็นลูกเต๋ายาวขนาด 2.54 ซม.	สูงสุด 300 ก. (2.5 ถ้วย)	2
วัตถุดิบเหลว/เนื้อข้น (เช่น มายองเนสหรือน้ำสลัด)	เติมวัตถุดิบแห้งหรือที่มีเนื้อข้นเหนียวในโถปั่น จากนั้นใช้ช่องบดวัตถุดิบเพื่อเติมน้ำมันหรือน้ำไปที่ส่วนผสมระหว่างการใช้งาน	สูงสุด 200 ก. (1.5 ถ้วย)	2
เนื้อสัตว์	ต้องเป็นเนื้อสดและตัดแบ่งเป็นชิ้นขนาด 2.54 ซม. เพื่อให้ปั่นได้อย่างมีประสิทธิภาพ	สูงสุด 227 ก. ต่อครั้ง	1 หรือ 2
เครื่องเทศและสมุนไพร	เติมเครื่องเทศและสมุนไพรตามปกติ ไม่ต้องแปรรูปในลักษณะใด ๆ	สูงสุด 350 ก. (3 ถ้วย)	1
ขนมปัง คุกกี้หรือแครกเกอร์	ฉีกขนมปัง หักแครกเกอร์หรือคุกกี้เป็นชิ้น ๆ ให้เหมาะกับโถปั่นก่อนดำเนินการต่อ	สูงสุด 350 ก. (3 ถ้วย)	1
ถั่ว	เติมถั่วโดยไม่ต้องแปรรูปในลักษณะใด ๆ	สูงสุด 350 ก. (3 ถ้วย)	2

คำแนะนำ: เพื่อให้ได้น้ำที่สม่ำเสมอ หรือเพื่อให้ได้น้ำมันหยาบ ๆ ให้ใช้ฟังก์ชัน Pulse





การใช้ผลิตภัณฑ์

การเตรียมการใช้งานเครื่องบดสับ


ก่อนการใช้งานครั้งแรก

ก่อนใช้งานเครื่องบดสับเป็นครั้งแรก ให้ล้างโถปั่น ฝาปิดและใบปั่นในน้ำสบูร้อน ล้างโถปั่น ฝาปิดและใบปั่นโดยวางที่ชั้นบนของเครื่องล้างจาน


เพื่อให้สะดวกในการจัดเก็บ ให้ประกอบเครื่องบดสับกลับหลังการทำความสะอาด

การถอดแยกชิ้นส่วนเครื่องบดสับ

ปฏิบัติตามคำแนะนำต่อไปนี้เพื่อถอดแยกชิ้นส่วนเครื่องบดสับสำหรับทำความสะอาดและขณะเทส่วนผสมออกจากโถปั่น

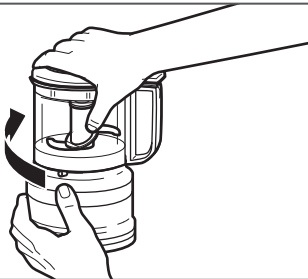1

อย่าลืมถอดปลั๊กเครื่องบดสับ จับที่ฝาดามภาพ แล้วหมุนตามเข็มนาฬิกาเพื่อปลดล็อก จากนั้นยกฝาล้อออกจากโถปั่น

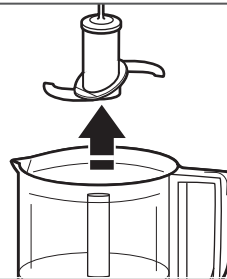2

ดึงโถปั่นขึ้นตรง ๆ เพื่อปลดล็อกแล้วนำออกจากโถปั่น


3

จับที่ฐานเครื่องให้มั่นคงด้วยมือข้างหนึ่ง และใช้มืออีกข้างหมุนโถปั่นตามเข็มนาฬิกาเพื่อปลดล็อกแล้วยกออกจากฐานเครื่อง




การใช้ผลิตภัณฑ์


การประกอบและเดินเครื่องบดสับ

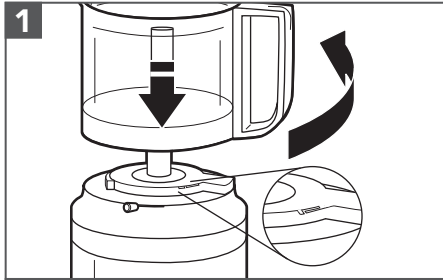


อย่าลืมถอดปลั๊กเครื่องบดสับ เริ่มจากหันมือจับ โถปั่นไปด้านหน้าที่ฐานเครื่อง หมุนมือจับ 90° ทวนเข็มนาฬิกาเพื่อล็อกให้เข้าที่ หากประกอบ ได้ถูกต้อง มือจับจะหันไปทางด้านขวา

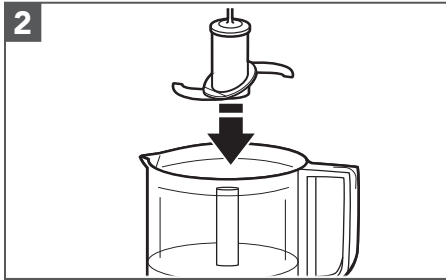

ประกอบใบปั่นเหนือแกนเพลลาที่กลางโถปั่น หมุนแล้วกดลงจนล็อกเข้าที่

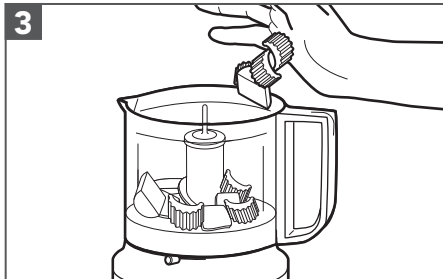

เติมวัตถุดิบที่จะปั่นเข้าไปด้านในโถปั่น เพื่อให้ได้เนื้อที่สม่ำเสมอ ให้หันฝัก ผลไม้และเนื้อสัตว์ ที่ขนาด 2.54 ซม.

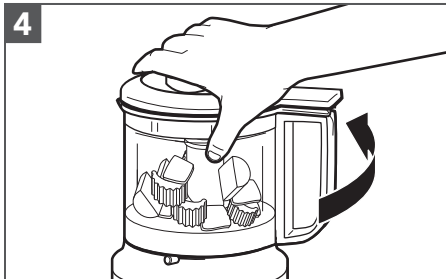

ปิดฝาโถปั่นโดยให้มือจับฝาปิดหันไปด้านหน้า หมุนมือจับฝาปิดไปทางด้านขวา ฝาปิดจะดังคลิกเมื่อล็อกเข้าที่ หมุนฝาปิดทวนเข็มนาฬิกาเพื่อล็อกเข้าที่


ข้อสำคัญ: อย่าบดเมล็ดกาแฟหรือเครื่องเทศ เนื้อแข็ง เช่น ลูกจันทน์ เนื่องจากอาจทำให้ เครื่องบดสับเสียหาย

หมายเหตุ: โถปั่นและฝาปิดจะต้องล็อกเข้าที่ เพื่อให้เครื่องบดสับทำงานได้






การใช้ผลิตภัณฑ์

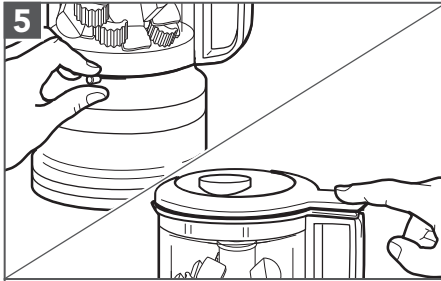

เลื่อนแป้นปรับความเร็วไปตามตำแหน่งที่ต้องการ กดปุ่ม PULSE/ON เพื่อเริ่มการทำงาน ของเครื่องบดสับ อย่างรวดเร็วเกินกว่า 30 วินาทีอย่างต่อเนื่อง ให้เว้นระยะระหว่างการใช้ งาน

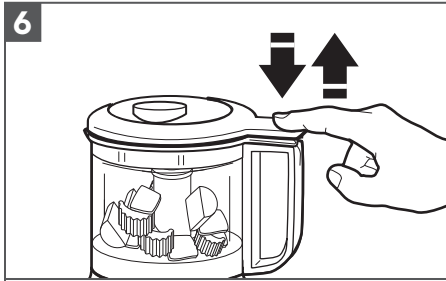


สำหรับการบดหยาบ ให้ใช้ฟังก์ชัน Pulse โดย กดและปล่อยมือที่ปุ่ม PULSE/ON เป็นระยะ ๆ อย่างรวดเร็วจนกว่าจะได้เนื้อส่วนผสมตามที่ ต้องการ


ภาพ

การใช้ช่องป้อนวัตถุดิบและปากเทส่วนผสม

ใช้ช่องป้อนวัตถุดิบเพื่อเติมวัตถุดิบเหลวขณะปั่นเพื่อทำน้าสลัด มายองเนส ส่วนผสมที่มีความข้นเหนียว และวัตถุดิบอื่น ๆ ใช้ปากเทส่วนผสมเพื่อให้สะดวกในการนำเสิร์ฟ

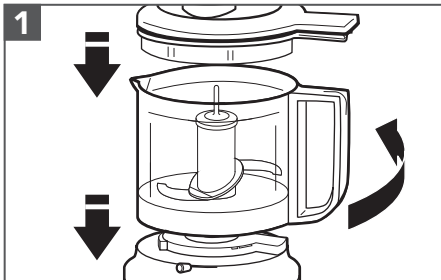

ปิดฝาโถปั่นโดยให้มือจับฝาปิดหันไปด้านหลัง หมุนมือจับฝาปิดไปทางด้านขวา หมุนฝาปิด ทวนเข็มนาฬิกาเพื่อล็อกเข้าที่

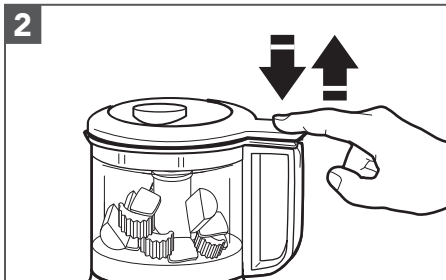

กดขึ้นและลงอย่างรวดเร็วที่ ปุ่ม PULSE/ON เพื่อให้ส่วนผสมของคุณเคลื่อนไปที่โถปั่น



ค่อย ๆ เทส่วนผสมเหลว เช่น น้ำมัน ลงในช่อง ป้อนวัตถุดิบ วัตถุดิบเหลวจะผสมเข้ากับวัตถุดิบ ด้านในโถได้อย่างทั่วถึงและมีประสิทธิภาพขณะ ที่ถูกปั่นอยู่ภายในโถปั่น




หลังจากปั่นเสร็จ ให้เปิดฝาแล้วใช้ปากเทส่วนผสม






การดูแลและทำความสะอาด


ข้อสำคัญ: ปลอยให้อุปกรณ์เย็นลงให้สนิทก่อนวางหรือถอดชิ้นส่วน และก่อนทำความสะอาดตัวเครื่อง

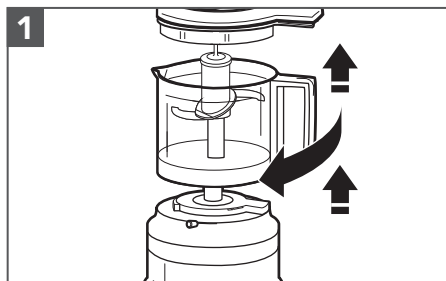


การถอดปลั๊กเครื่องบดสับ นำโถปั่น ฝาปิดและใบป้อนออก

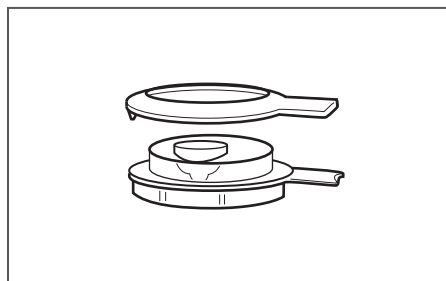

อุปกรณ์เสริม: แหวนซีลฝาปิดสามารถนำออกเพื่อให้ทำความสะอาดได้อย่างล้ำลึกมากยิ่งขึ้นในกรณีที่จำเป็น

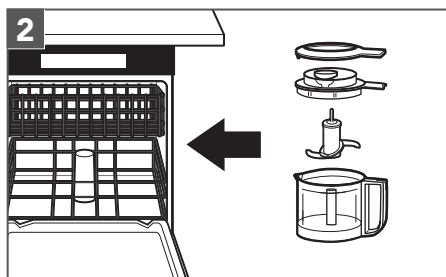

ฝาปิดโถปั่น แหวนซีลฝาปิดและใบป้อนสามารถล้างทำความสะอาดในเครื่องล้างจานชั้นบนสุด หรือสามารถใช้น้ำสบูร้อนทำความสะอาดชิ้นส่วนต่าง ๆ ซะล้างนำออกแล้วทำให้แห้ง

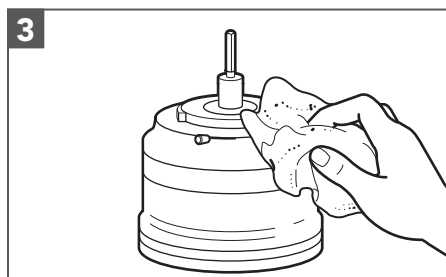

เช็ดฐานเครื่องให้สะอาดโดยใช้ผ้าชุบน้ำหมาด อย่าใช้น้ำยาทำความสะอาดที่กัดกร่อน อย่าจุ่มฐานเครื่องในน้ำ

คำแนะนำ: ม้วนสายทวนเข็มนาฬิกาเพื่อให้อุปกรณ์ให้สะดวกในการจัดเก็บ

หมายเหตุ: เพื่อให้สะดวกในการจัดเก็บ ให้ประกอบเครื่องบดสับกลับหลังการทำความสะอาด





การแก้ไขปัญหา



⚠ คำเตือน

อันตรายจากไฟฟ้าช็อต

- เสี่ยงเข้ากับเต้ารับที่มีสายดิน
- อย่าตัดขาลงกราวด์
- อย่าใช้หัวต่อ
- อย่าใช้สายพ่วง

หากไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เสียชีวิต เกิดเพลิงไหม้หรือไฟฟ้าช็อตได้

ไทย

ปัญหา	แนวทางแก้ไข
ถ้าเครื่องปั่นอาหารของคุณทำงานผิดปกติ หรือไม่ทำงาน โปรดตรวจสอบดังต่อไปนี้:	เครื่องบดสับเสี่ยงปลั๊กอยู่หรือไม่
	โกศผสมและฝาปิดจะต้องอยู่ในตำแหน่งที่เหมาะสมและล็อกเข้าที่
	กดปุ่ม PULSE/ON ขึ้นลงอย่างรวดเร็ว อย่ากดลงต่อเนื่อง
	ถอดปลั๊กเครื่องบดสับ จากนั้นเสี่ยงปลั๊กกลับเข้าที่
	ฟิวส์วงจรเครื่องบดสับทำงานตามปกติหรือไม่ ถ้าคุณมีกล่องเบรกเกอร์ตัดไฟ ตรวจสอบว่าวงจรอยู่ในสถานะปิดวงจร
หากไม่สามารถแก้ไขปัญหาได้:	ติดต่อศูนย์บริการที่ได้รับอนุญาตเพื่อขอคำแนะนำเพิ่มเติม อย่าส่งคืนเครื่องบดสับให้กับร้านค้า ร้านค้าไม่ได้เป็นผู้ให้บริการซ่อมบำรุง





NOTES





NOTES





NOTES





NOTES





KitchenAid

©2022 All rights reserved.
สงวนลิขสิทธิ์

